The FP-12 power supply provides an output voltage of 13.8 DC volts at 12 amperes, with excellent regulation. The FP-12 is designed for use with the FT-7B and CPU-2500R transceivers, and it includes an 8 ohm speaker for base station listening. Protection against short circuits in the power lead is provided.

## SPECIFICATIONS

Input voltage: 100/110/117/200/220/234 volts AC, 50/60 Hz
Output voltage: 13.8 volts DC (adjustable from 10-15 volts)

Output current: 12 amperes, 50% duty cycle


Current limiting level: 16 amperes


Ripple: 50 mV p-p (100 volts input, 12 amps)

Case size: 180 (W) x 85 (H) x 290 (D) mm

Weight: Approximately 7.3 kg.

Specifications subject to change without notice.

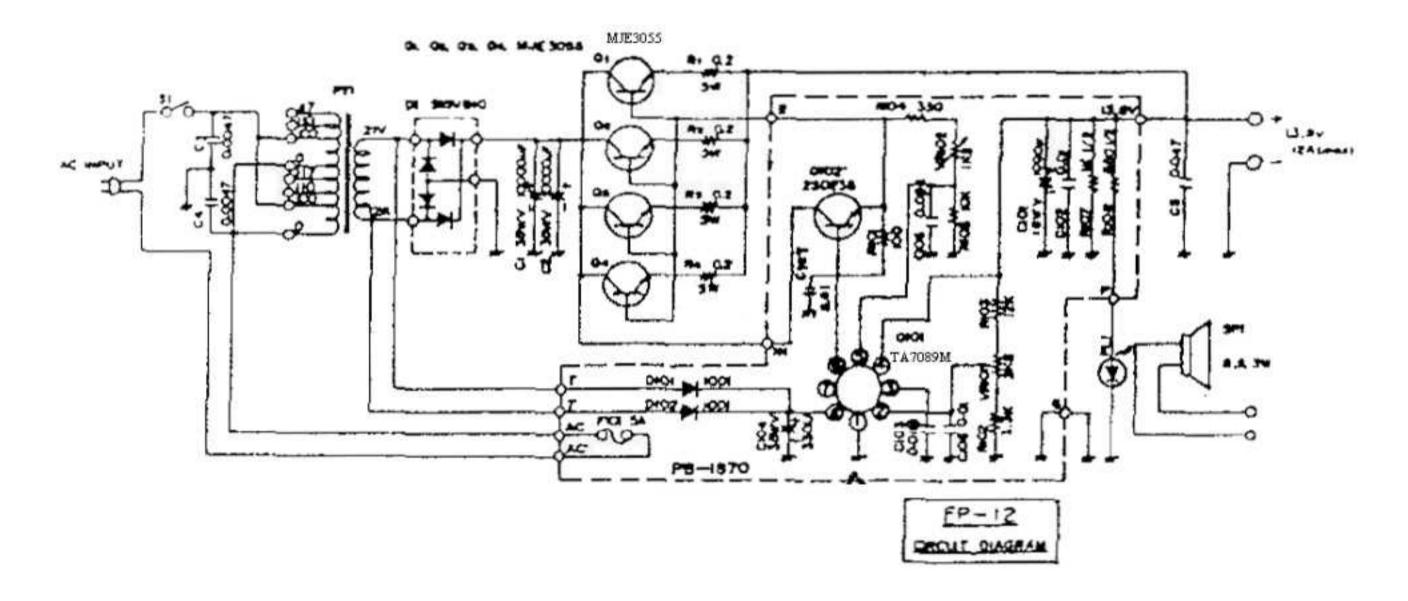

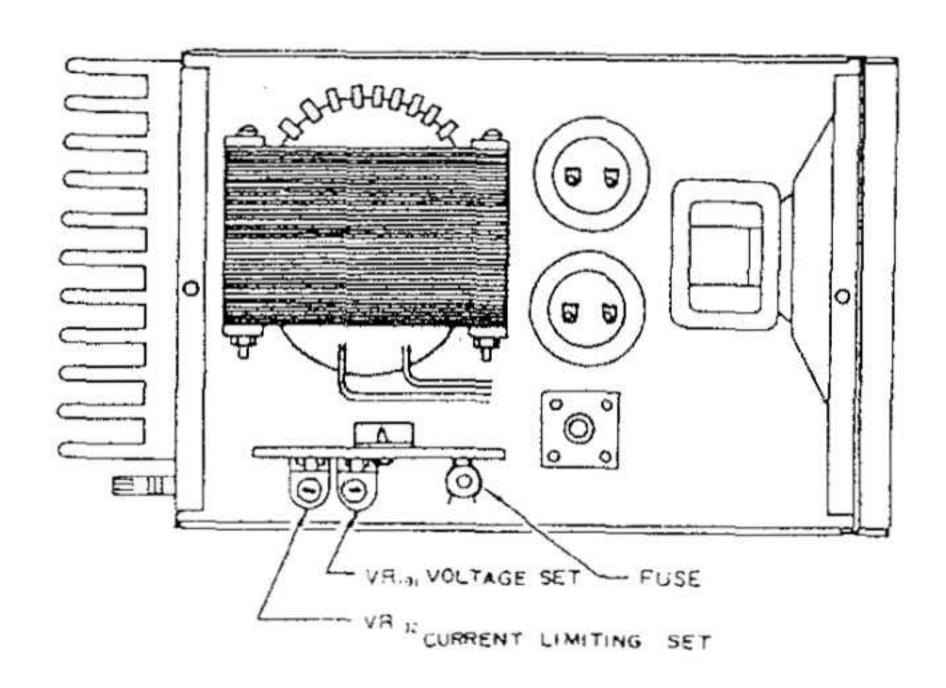

\* \* \* \* \* \* \* \*

- Be absolutely certain that the voltage specification marked on the power supply is the same as that of your local supply voltage. Refer to the transformer connection chart for details, should you change locations.
- 2. Connect the POSITIVE power lead (RED) from the transceiver to the POSITIVE (+) terminal of the power supply, and connect the NEGATIVE power lead (BLACK) from the transceiver to the NEGATIVE terminal on the power supply. Refer to the drawing.
- 3. Turn the power switch ON to commence operation. The speaker lead may be plugged into the external speaker jack on the rear of the transceiver for external speaker operation.


## WARNING

WHEN REPLACING FUSES, BE CERTAIN TO USE ONLY A 5 AMPERE FUSE FOR 100/110/117 VAC, OR A 3 AMPERE FUSE FOR 200/220/234 VAC.

OUR WARRANTY DOES NOT COVER DAMAGE CAUSED BY IMPROPER FUSE INSTALLATION.

OUR WARRANTY DOES NOT COVER DAMAGE CAUSED BY IMPROPER APPLICATION OF AC SUPPLY VOLTAGE. BE CERTAIN OF THE SUPPLY VOLTAGE AND TRANSFORMER CONNECTIONS BEFORE COMMENCING OPERATION.

DO NOT EXCEED THE RECOMMENDED 50% DUTY CYCLE.

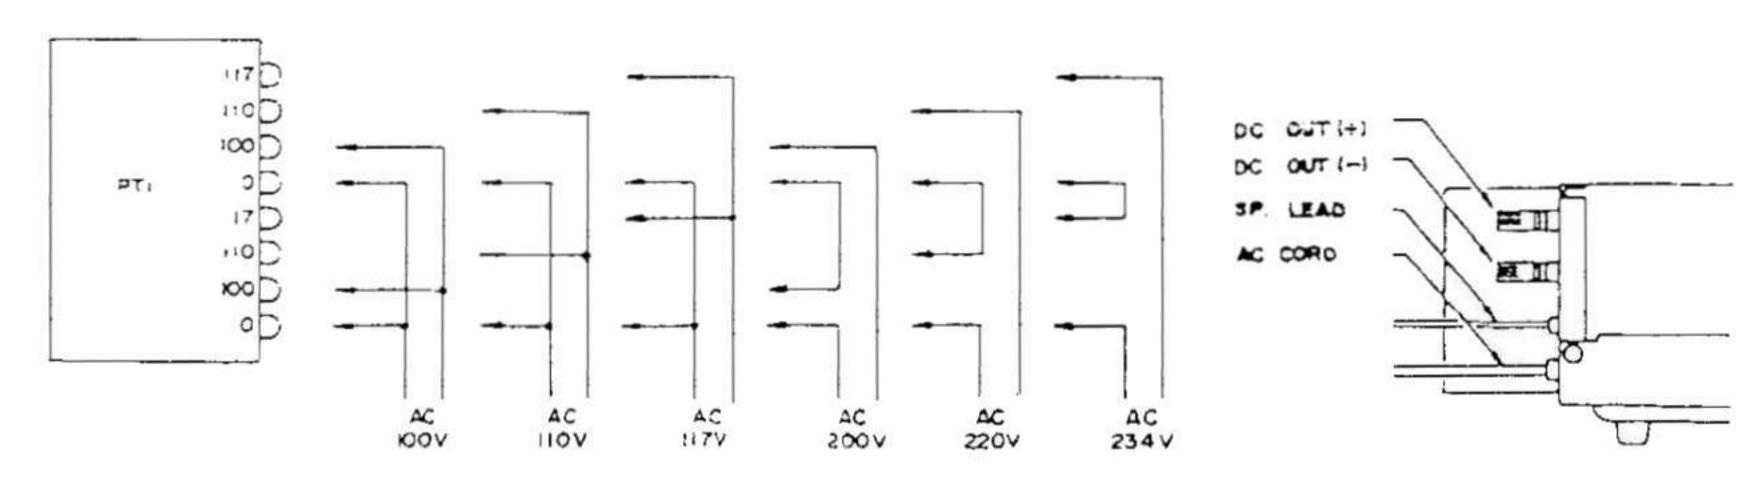

POWER TRANSFORMER PRIMARY CONNECTION

YAEŚU MUSEN COMPANY, LTD. C.P.O. BOX 1500 TOKYO, JAPAN

YAESU ELECTRONICS CORP.
P.O. BOX 498
PARAMOUNT, CA 90723
USA

Printed in Japan