

ALCATEL

home & business phones

BABY LINK 700



USER'S GUIDE

PLEASE READ THIS USER'S GUIDE BEFORE USING YOUR BABY MONITOR

ATLINKS, 22 quai Gallieni 92150 Suresnes - France
The Alcatel logo and Alcatel name are trademarks of Alcatel Lucent and used under license by ATLINKS.

Before use

You may test the baby monitor before initial use, and at regular times thereafter.

To test your baby monitor:

1. Place the parent unit and the baby unit in the same room to test the product.
2. Press and hold on the parent unit the screen displays **Please Wait...**
3. Slide **ON/OFF** on the baby unit to turn it on.
4. If the parent unit displays an image from the baby unit. Your baby monitor is now ready for use.

Note:

 
- Make sure the baby unit is at least 3 feet away from the parent unit.
- If both units are not connected, the parent unit displays No Link for a few seconds. Then it displays Please Wait... and flashes.

Install the battery


You can power up the parent unit by connecting it to AC power or to the rechargeable battery provided. Even if the parent unit is connected to AC power, we recommend you also install the battery. This guarantees continual operation in case of a power outage.

Install the battery as shown below.

1. With the label **THIS SIDE UP** facing up, insert the small tabs of the battery into the slots inside the battery compartment. Make sure the metallic contact is correctly oriented as shown below. Push the battery into the battery compartment until it clicks securely into place.

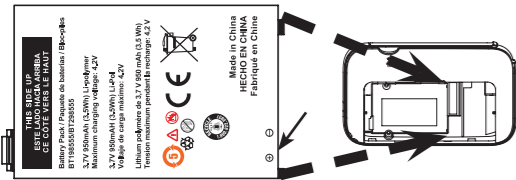


 2. Align the battery compartment cover flat against the battery compartment, then slide it towards the center of the parent unit until it clicks into place.

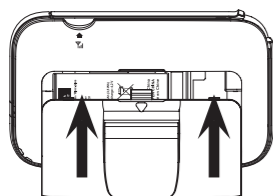

Replace the battery

 To replace the battery, press down on the large tab of the battery and pull it out of the battery compartment, then follow the steps above to install the battery.

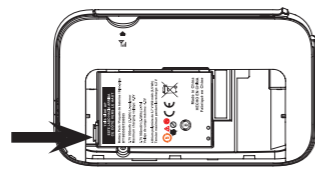

Note:

 
- The operating time for using the rechargeable battery is short. If you want to monitor your baby for a long time, we recommend you connect the parent unit to AC power.
- If the parent unit will not be used for a long time, disconnect and remove the battery to prevent possible leakage.
- Use only the battery supplied with this product.

Connect and charge the battery


Note:

- Use only the parent unit power adapter and the baby unit power adapter supplied with this product.
- The parent unit power adapter and baby unit power adapter are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
- Make sure the parent unit, the baby unit and the power adapter cord are out of reach of children.

Connect the baby unit

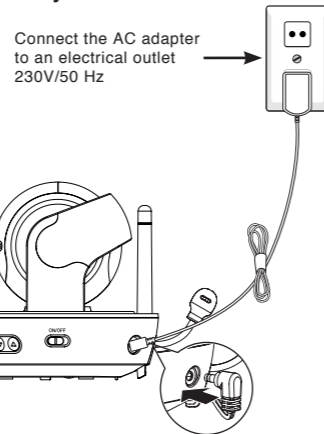

Connect the parent unit

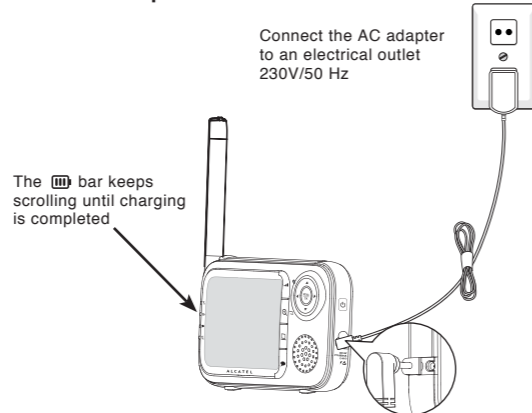 

Charge the parent unit battery

Once you have installed the parent unit and its battery, **press and hold** to turn it on. The battery icon indicates the battery status (see the Parent unit display icons table).

The standby time varies depending on the sensitivity level you set, your actual use and the age of the battery.

When the parent unit is operating in battery mode and the battery is low, you need to charge the parent unit without interruption for at least 30 minutes to give the parent unit enough charge to use for a short time. When operating in low battery condition, the parent unit displays Battery low and . The parent unit plays short beeps to alert you.

Note:

When you charge the battery initially or it is not used for a long period of time, charge it for 12 hours continuously. It takes longer to charge the battery when the parent unit is turned on. To shorten the charging time, turn the parent unit off while charging.

Positioning the baby monitor

Place the parent unit within the operating range of the baby unit. We recommend the parent unit is at least 3 feet away from the baby unit to avoid audio feedback. If you still experience audio feedback, move the parent unit and the baby unit farther apart.

Note:

 
For better image quality, do not place the baby unit too far away from your baby.

Operating range


The operating range of the baby monitor is up to 250m outdoors or 50m indoors. The actual operating range may vary depending on the environmental conditions and other interferences such as walls, doors and other obstructions.

Overview

Baby unit overview

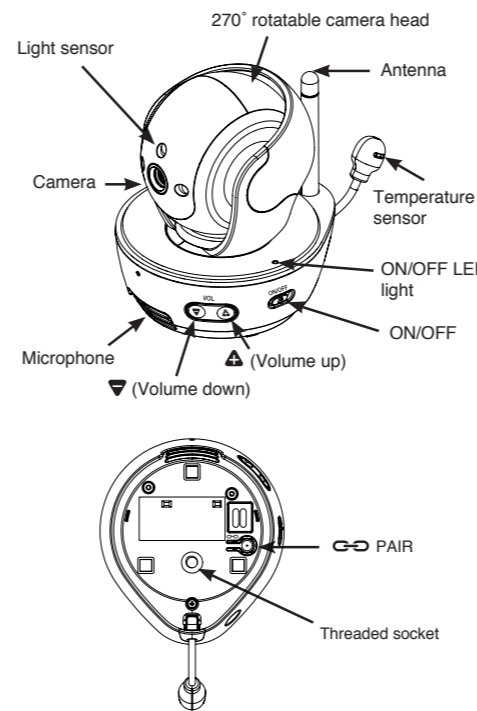

Parent unit overview

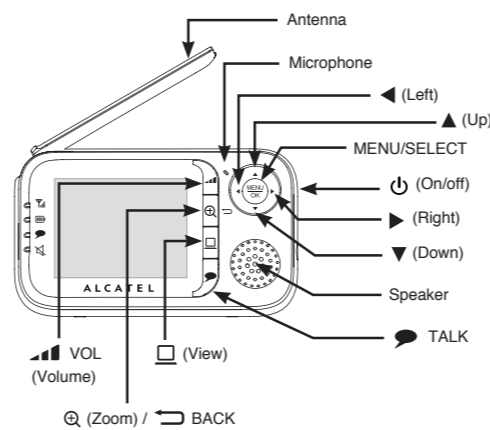 

Parent unit lights

	On when strong signal strength is detected between the parent unit and the selected baby unit. Flashes when the parent unit cannot link to the selected baby unit. Off when the parent unit is turned off.
	On when the parent unit battery is being charged. Flashes when the parent unit battery is low and needs charging. Off when the parent unit battery is fully charged, or when no battery is installed.
	On when the parent unit is talking to the baby unit.
	On when the speaker volume of the parent unit is turned off.

Parent unit display icons

	Connection status - displays when strong signal strength is detected between the baby unit and the parent unit. - or displays when moderate signal strength is detected between the baby unit and the parent unit. - displays when the link between the baby unit and the parent unit is lost.
	Current view status - Displays the number of the baby unit that is being viewed when in Single Baby unit. - Displays the highlighted baby unit when in Patrol Mode, if there are more than one baby units in your system.
	Zoom - Displays when the camera at the baby unit has zoomed in.
	Temperature alert - Displays when the temperature alert is set to on.
25 °C	Real-time temperature - Displays the real-time temperature of the selected baby unit.
	Sound level indicators - Displays the sound level according to the scales of loudness when there is sound transmitted from the baby unit.
	Speaker volume - Displays the speaker volume of the parent unit is turned off. Speaker volume - Displays the speaker volume level while adjusting.
	Battery status - animates when the battery is charging. - displays solid when the battery is fully charged. - displays when the battery is low and needs charging. - displays when no battery is installed but operates using AC power, or the battery has been installed incorrectly.

Parent unit main menu icons

	Monitoring mode You can choose to monitor in Single Baby unit, Split Baby unit or Patrol Mode if there are more than one baby units in your system.
	Language You can select a language to be used in all screen displays.
	Display - You can change the brightness of the parent unit screen. - You can change the contrast of the parent unit screen.
	Alert tone - You can set whether the parent unit beeps whenever the parent unit operates in low battery condition. - You can set whether the parent unit beeps whenever the link between the parent unit and the baby unit is lost. - You may turn on the sound alert so that the parent unit beeps as soon as the baby unit detects sounds which light up four sound level indicators on the parent unit when the parent unit volume is turned off manually.
	Temperature - You can set the desired minimum room temperature of the baby unit. - You can set the desired maximum room temperature of the baby unit. - You can set whether the parent unit beeps whenever the temperature is out of the preset temperature range. - You can set the temperature scale of the baby unit.
	Sensitivity - You can use the parent unit to change the sound sensitivity level of the baby units.

	Sound activation - You can set the screen to be turned on automatically whenever there are sounds detected from the baby units when the parent unit screen is turned off manually.
	Pair/unpair - The baby units and parent unit provided are already paired. You can add or replace baby units (purchased separately) to your baby monitor system.

Parent unit display messages

	Battery low When the parent unit is powered by the rechargeable battery and the battery level is low, it needs to be recharged.
	Failed to connect The parent unit fails to switch to the next baby unit in Single Baby unit or Patrol Mode.
	No Link The selected baby unit slot is not linked to the parent unit.
	Pairing failed The selected baby unit cannot be paired with the parent unit.
	Confirm to unpair? You try to unpair the baby unit(s). The operation needs your confirmation.
	Pairing completed The selected baby unit has been paired with the parent unit.
	Unpairing completed The selected baby unit(s) has been unpaired with the parent unit.
	Please Wait... The link between the parent unit and the selected baby unit is lost, or the selected baby unit is out of range, or the selected baby unit slot is empty. When you have only one paired baby unit and the link is lost, or you have multiple paired baby units and the links are lost.
	Temperature too low The temperature detected from the selected baby unit is below the set minimum temperature.
	Temperature too high The temperature detected from the selected baby unit is above the set maximum temperature.

Using the baby monitor

Adjusting speaker volume for parent unit

You can change the speaker volume from **Volume 1** to **Volume 5**, or turn it off.

When the speaker volume is set to off, appears briefly and the light turns on.

To adjust the speaker volume:

1. Press when the parent unit is not in use.
2. Press , , or to adjust the speaker volume.

Adjusting speaker volume for baby unit

You can change the speaker volume.

To adjust the speaker volume:

Press or on the baby unit at any time.

Adjusting display

LCD brightness

You can change the brightness of the parent unit screen from **Level 1** to **Level 5**.

To set the brightness of the parent unit screen:

1. Press when the parent unit is not in use.
2. Press or to choose **DISPLAY**, then press to select.
3. Press or to choose **Brightness**.
4. Press or to choose the desired level of brightness, then press confirm your selection.

LCD contrast

You can change the contrast of the parent unit screen from **Level 1** to **Level 5**.

To set the contrast of the parent unit screen:

1. Press when the parent unit is not in use.
2. Press or to choose **DISPLAY**, then press to select.
3. Press or to choose **Contrast**.
4. Press or to choose the desired level of contrast, then press to confirm you selection.

