

1001002, Washington

40-Channel SSB Base

\$5.00




Service manual

**PRESIDENT**

Engineered to be the very best.


President Electronics, Inc., 16691 Hale Ave.,  
Irvine, California 92714 (714) 556-7355

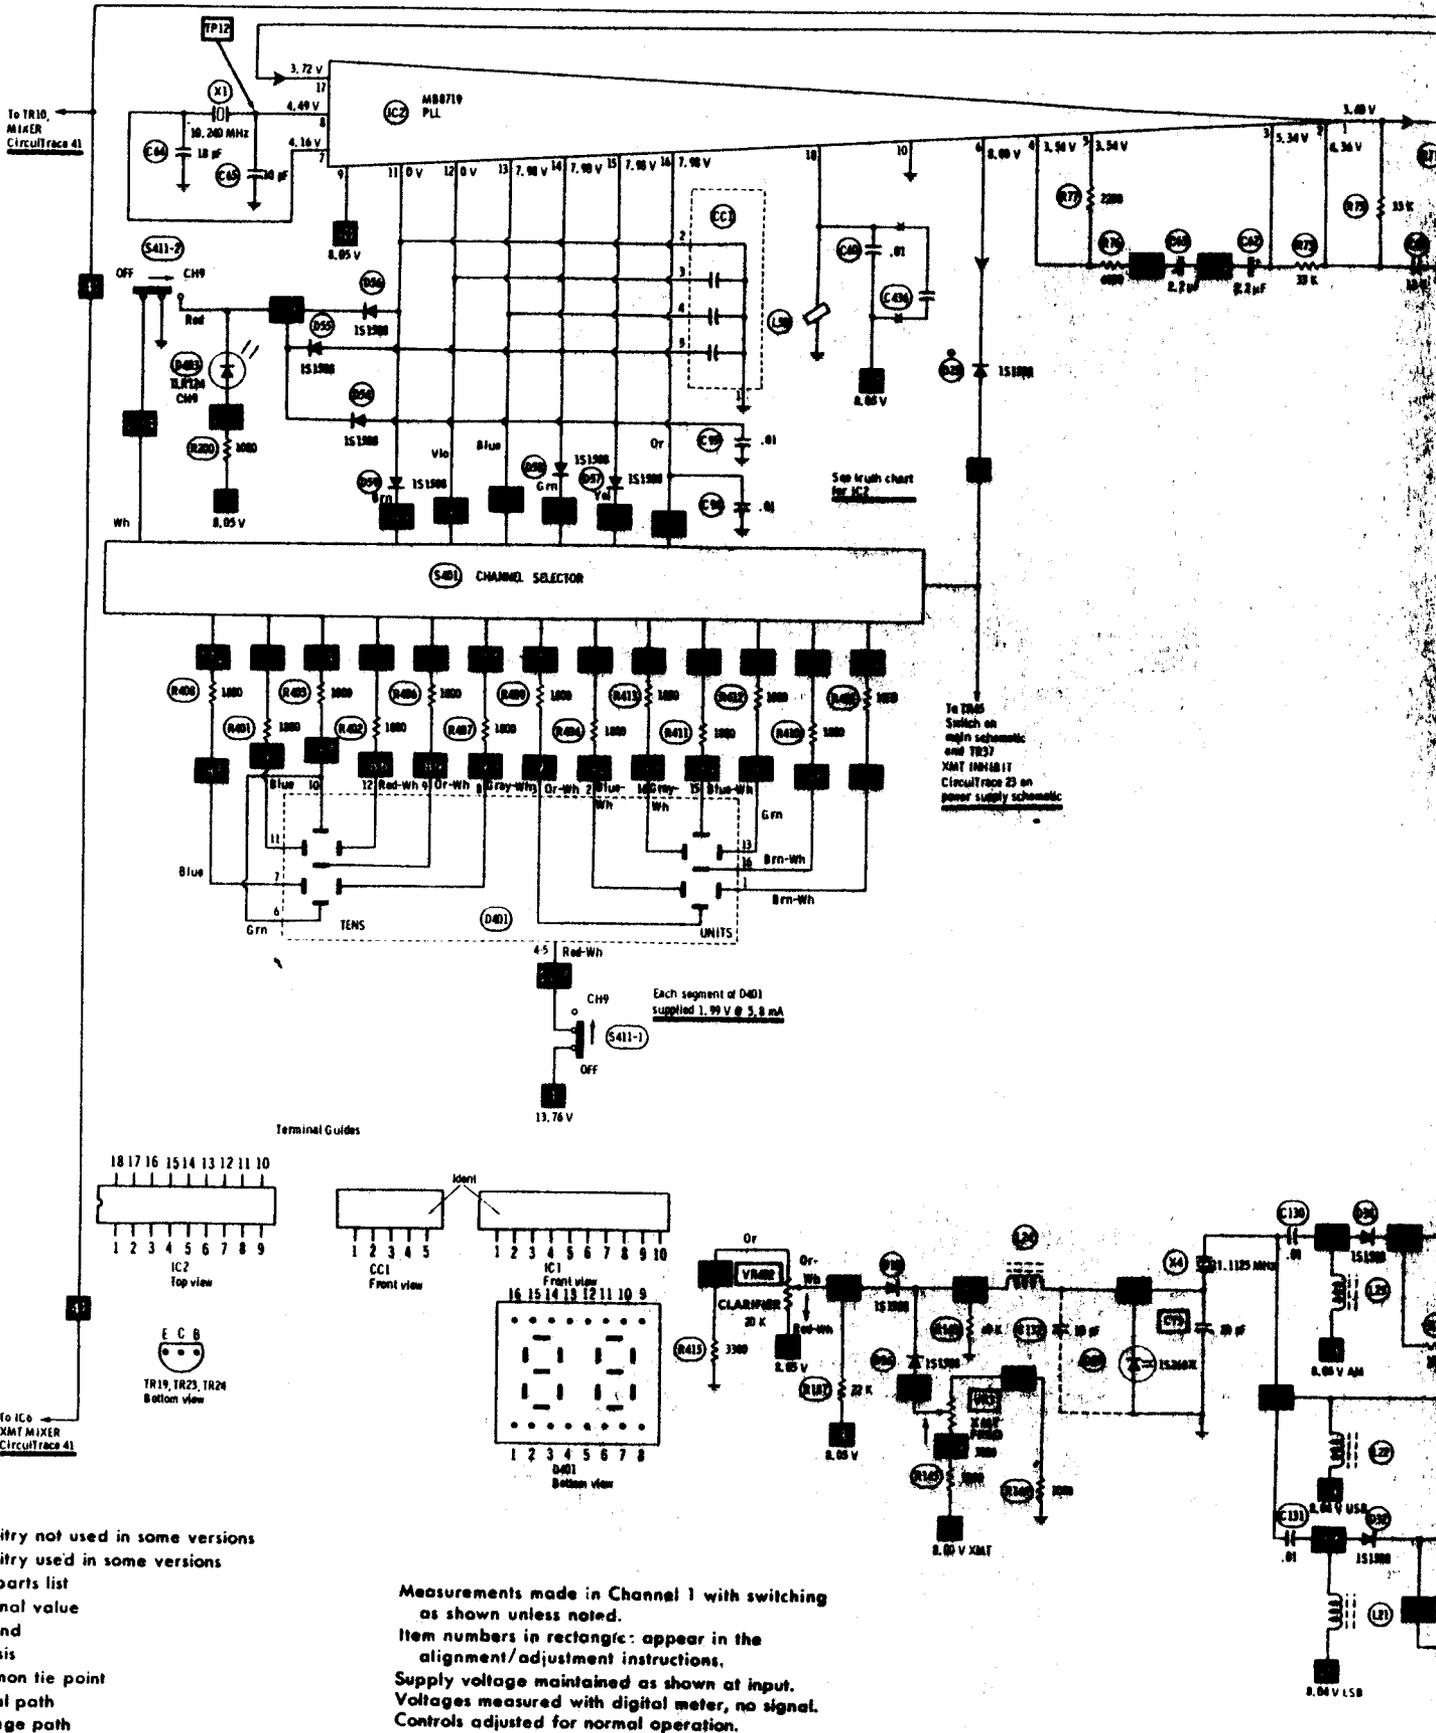


- Circuitry not used in some versions
- - - Circuitry used in some versions
- See parts list
- ⊙ Nominal value
- ⊕ Ground
- ⊞ Chassis
- ⊖ Common tie point
- ⊞ Signal path
- ⊞ Voltage path

Measurements made in Channel 1 with switching as shown unless renoted.  
 Item shown in rectangle: appear in the alignment/adjustment instructions.  
 Supply voltage maintained as shown at input.  
 Voltages measured with digital meter, no signal.  
 Controls adjusted for normal operation.  
 Arrow at control indicates direction of advance.  
 Terminal identification may not be found on unit.  
 Resistors are 1/2W or less, 5% unless noted.  
 Value in ( ) used in some versions.

PRESIDENT MODEL 1001002, WASHINGTON

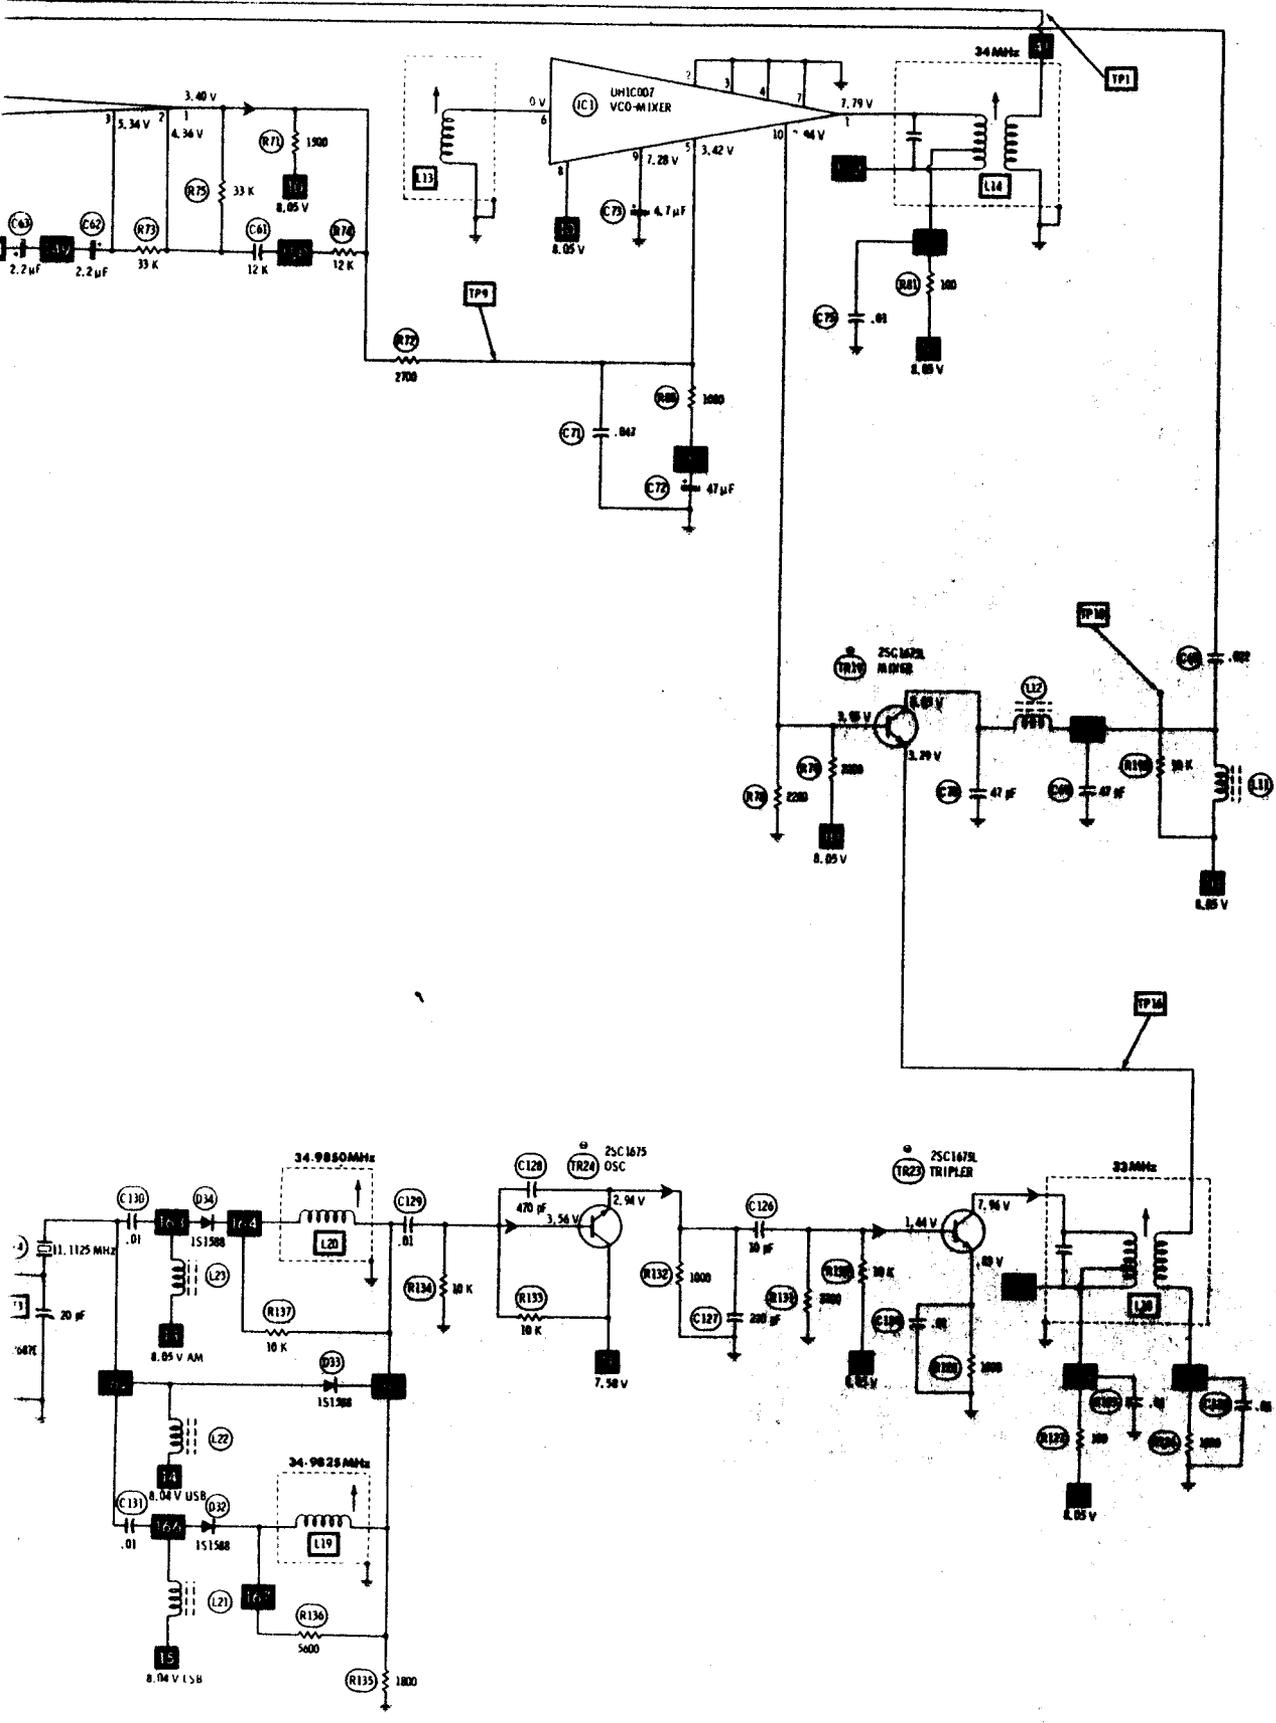

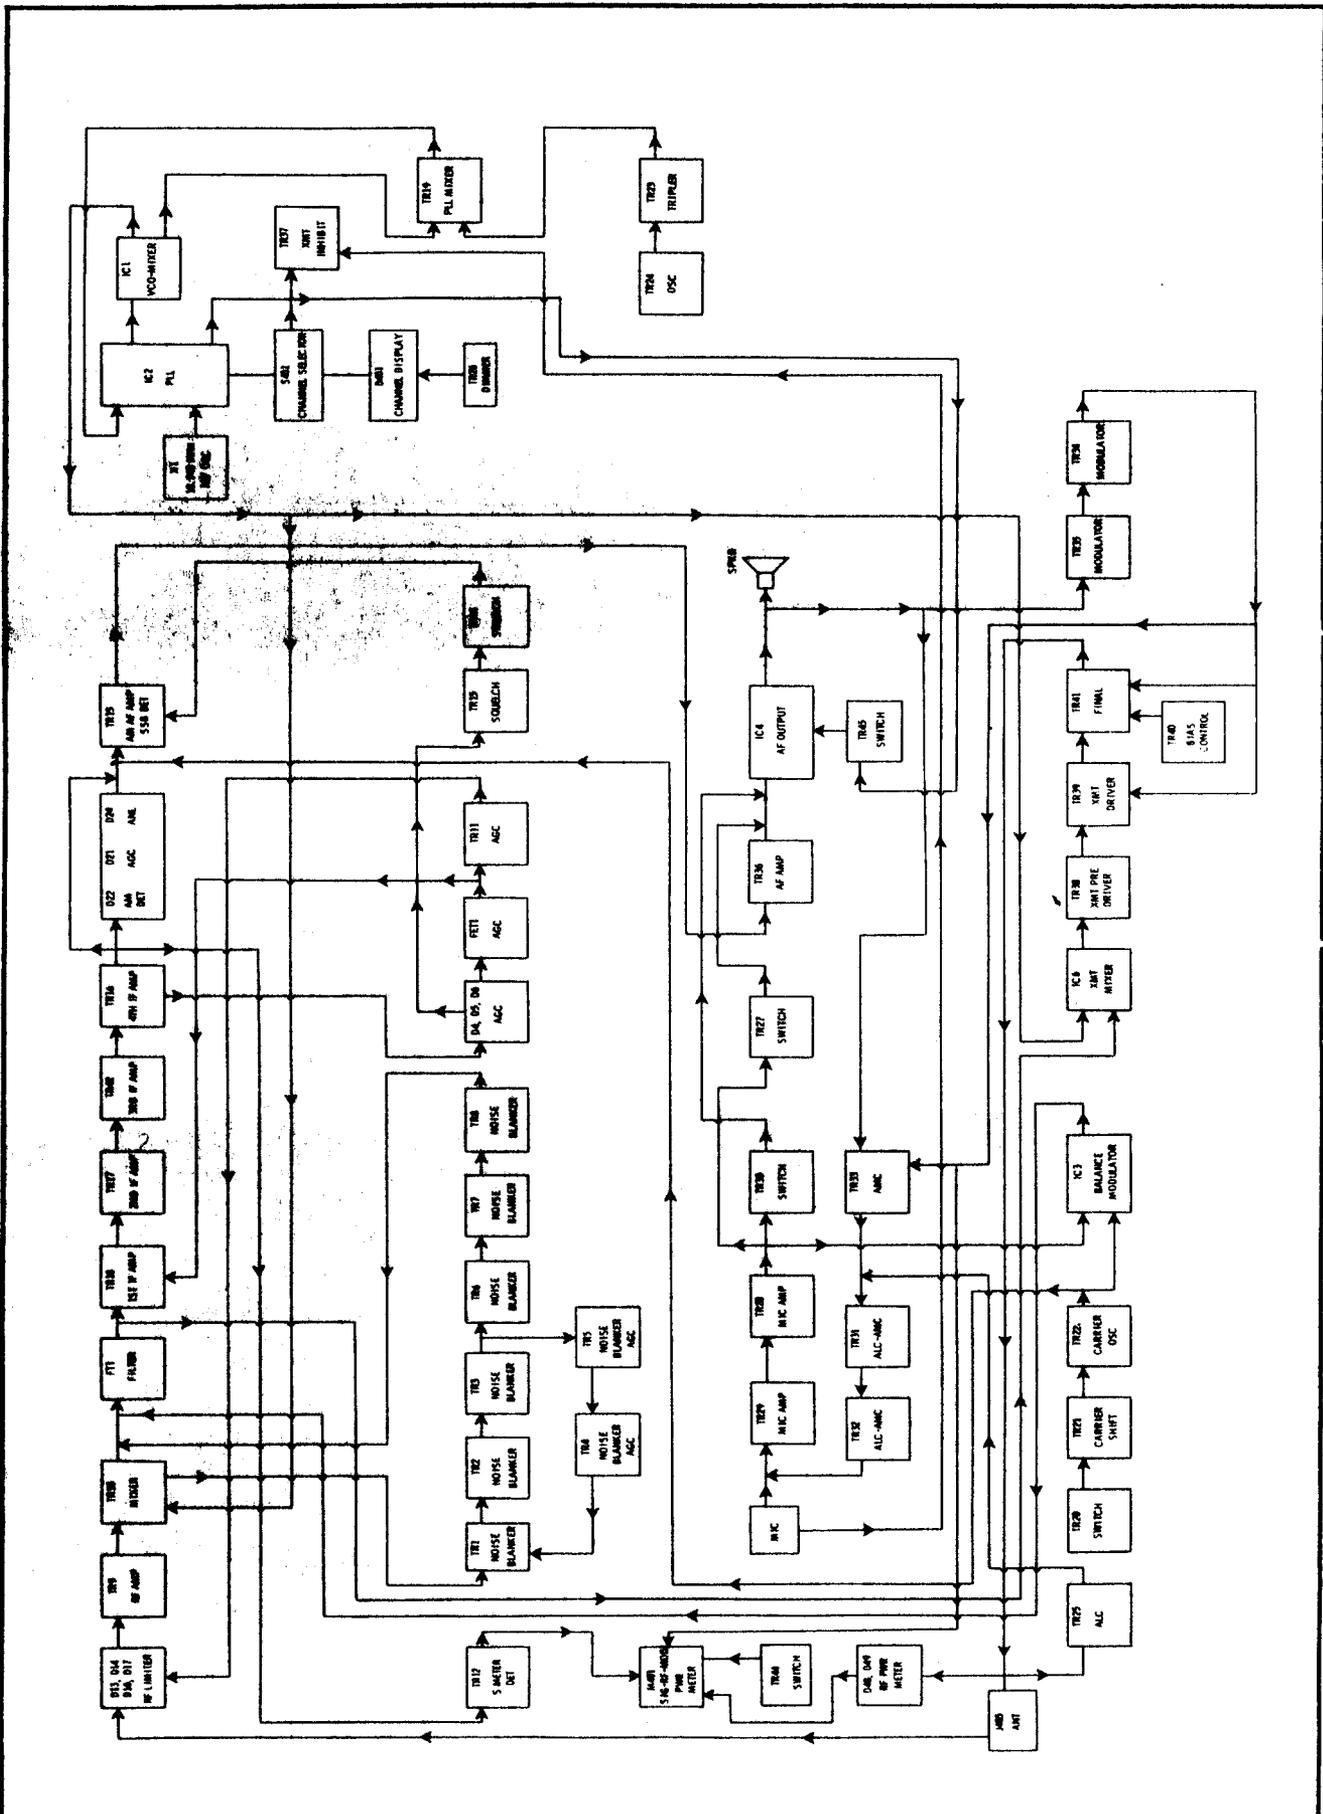

**BLOCK DIAGRAM**

## ALIGNMENT INSTRUCTIONS

**CAUTION:** Use isolation transformer or observe polarity when connecting test equipment. Maintain line voltage at 120V AC. Allow a 15-minute warm-up period.  
 Adjustments made with 13.8-volt DC at TP15.  
 Connect low sides of test equipment to ground unless specified otherwise.  
 Connect 50-ohm dummy load or antenna before keying transmitter.  
 Connect microphone.

**Suggested Alignment Tools:** GC ELECTRONICS:  
 L1 thru L10, L13, L14, L17 thru L20, L26 thru L29 ... 9440  
 L36, L39 ..... 8728, 8728A, 9304  
 CT1, CT2, CT3 ..... 5000, 8276

## SYNTHESIZER ALIGNMENT

| TEST EQUIPMENT   | TRANSCIVER                        | ADJUST | REMARKS   |
|--|-----------------------------------|--------|---|
| Input of frequency counter to TP12 (IC2 Pin 8).            | Ch. 19, AM                        |        | Check for 10.240MHz.  |
| Input of oscilloscope to TP16 (L18 Secondary).             | Ch. 19, AM<br>Clarifier Midrange  | L18    | Adjust for maximum RF.  |
| Input of DC meter to TP9.                                  | Ch. 40, AM                        | L13    | Adjust for 5.00 volts.  |
| Input of oscilloscope to TP1.                              | Ch. 19, USB                       | L14    | Adjust for maximum RF.  |
| Input of frequency counter to TP1.                         | Ch. 19, USB<br>Clarifier Midrange | CT3    | Adjust for 34.9875MHz +20Hz. Check all channels. (See Truth Chart for correct frequencies.) |
| Input of frequency counter to TP1.                         | Ch. 19, LSB<br>Clarifier Midrange | L19    | Adjust for 37.9825MHz +20Hz. Check all channels. (See Truth Chart for correct frequencies.) |
| Input of frequency counter to TP1.                         | Ch. 19, AM<br>Clarifier Midrange  | L20    | Adjust for 34.9850MHz +20Hz. Check all channels. (See Truth Chart for correct frequencies.) |
| Input of frequency counter to TP1.                         | Ch. 19, XMT, LSB                  | VR3    | Adjust for 34.9825MHz +20Hz.  |
| Input of frequency counter to TP10.                        | Ch. 1, USB                        |        | Check for 1.430MHz. Check all channels. (See Truth Chart for correct frequencies.)          |
| Input of frequency counter to TP3.                         | Ch. 19, USB                       | CT1    | Adjust for 7.8025MHz +5Hz or -0Hz.  |
| Input of frequency counter to TP3.                         | Ch. 19, USB                       | CT2    | Adjust for 7.7975MHz +0Hz or -5Hz.  |
| Input of frequency counter to TP3. Disconnect TP7 and TP8. | Ch. 19, XMT, AM                   | L17    | Adjust for 7.8000MHz +5Hz.  |

## RECEIVER ALIGNMENT

Connect an AC VTVM or AF wattmeter across speaker voice coil.  
 Adjust volume control to obtain a suitable indication.  
 Set generator output low enough to prevent AGC limiting.  
 Mode AM, RF Gain Maximum, Squelch MINIMUM, Clarifier Midrange, NB Off

AM

| TEST EQUIPMENT   | TRANSCEIVER | ADJUST              | REMARKS  |
|--|-------------|---------------------|--|
| Output of signal generator thru .01uF to TP13 (TR10 Collector). 7.8MHz, 1000Hz @ 30% modulation.   | Ch. 19      | L3,L4               | Adjust for maximum output.   |
| Output of signal generator thru .01uF to antenna input. 27.185MHz, 1000Hz @ 30% modulation.  | Ch. 19      | L5,L6,L7, L8,L9,L10 | Adjust for maximum output. If necessary readjust L3 and L4 for maximum.  |
| Output of signal generator thru .01uF to antenna input. 27.185MHz, 1000Hz @ 30% modulation. Input of oscilloscope to TP14 (TR6 Emitter). | Ch. 19      | L1,L2               | Set generator output for 10db signal to noise plus noise ratio of receiver. Inject a 100pps, 1uSec pulse width signal at antenna input. Switch Noise Blanker on and adjust for maximum amplitude pulses. |

## RECEIVER ADJUSTMENTS

Connect an AC VTVM or AF wattmeter across speaker voice coil.  
 Adjust volume control to obtain a suitable indication.  
 Mode AM, RF Gain Maximum, Squelch MINIMUM, Clarifier Midrange, NB Off

| TEST EQUIPMENT   | TRANSCEIVER               | ADJUST | REMARKS  |
|--|---------------------------|--------|--|
| Output of signal generator thru .01uF to antenna input. 27.185MHz, 1000Hz @ 30% modulation. Output 1000uV. | Ch. 19<br>Squelch Maximum | VR2    | SQUELCH RANGE<br>Adjust so that squelch just breaks. |
| Output of signal generator thru .01uF to antenna input. 27.185MHz, 1000Hz @ 30% modulation. Output 100uV.  | Ch. 19<br>S/RF/MOD S/RF   | VR1    | SIG METER<br>Adjust for 9 on sig scale of meter.     |

## RECEIVER ALIGNMENT

Connect an AC VTVM or AF wattmeter across speaker voice coil.  
 Adjust volume control to obtain a suitable indication.  
 Set generator output low enough to prevent AGC limiting.  
 Mode USB, RF Gain Maximum, Squelch MINIMUM, Clarifier Midrange, NB Off

SSB

| TEST EQUIPMENT  | TRANSCEIVER | ADJUST              | REMARKS   |
|---|-------------|---------------------|---|
| Output of signal generator thru .01uF to TP13 (TR10 Collector). 7.8025MHz, no modulation. | Ch. 19      | L3,L4               | Adjust for maximum output.  |
| Output of signal generator thru .01uF to antenna input. 27.186MHz, no modulation.         | Ch. 19      | L5,L6,L7, L8,L9,L10 | Adjust for maximum output. If necessary readjust L3 and L4 for maximum. |

## TRANSMITTER ALIGNMENT

Connect an RF wattmeter and 50-ohm, 25-watt dummy load to antenna connector.

**NOTE:** Be sure to check transmit frequency and power on all active channels after alignment of transmitter.  
See page 4 for channel frequencies.

| TEST EQUIPMENT   | TRANSCEIVER                      | ADJUST                      | REMARKS  |
|--|----------------------------------|-----------------------------|--|
| Input of RF wattmeter and 50-ohm, 25 watt dummy load to antenna input. Inject a two tone 50mV signal at Mic input. | Ch. 19, USB<br>Mike Gain Maximum | L26,L27,<br>L28,L29,<br>L36 | Set VR7 to MINIMUM.<br>Adjust for maximum RF output. |
| Input of spectrum analyzer or harmonic meter to antenna input.   | Ch. 19, AM<br>Mike Gain MINIMUM  | L39                         | Adjust for MINIMUM at 54MHz (2nd harmonic).          |

## TRANSMITTER ADJUSTMENTS

Connect an RF wattmeter and 50-ohm, 25-watt dummy load to antenna connector.


**NOTE:** Be sure to check transmit frequency and power on all active channels after adjustment of transmitter.  
See page 4 for channel frequencies.

| TEST EQUIPMENT  | TRANSCEIVER                                      | ADJUST | REMARKS   |
|---|--|--------|---|
| Input of DC meter to TP15.  | Ch. 19, AM                                       | RT301  | VOLT REGULATOR<br>Adjust for 13.80 volts.   |
| Input of oscilloscope or modulation meter to antenna input.   | Ch. 19, AM<br>S/RF/MOD MOD                       | VR12   | MOD METER<br>Adjust so that MOD meter agrees with external modulation meter.                                |
| Insert a 0-150mA DC current meter at TP8. No modulation.  | Ch. 19, USB<br>Mike Gain MINIMUM                 | VR8    | RF DRIVER BIAS<br>Adjust for 35mA idle current. Reconnect TP8.  |
| Insert a 0-150mA DC current meter at TP7. No modulation.  | Ch. 19, USB<br>Mike Gain MINIMUM                 | VR9    | RF FINAL BIAS<br>Adjust for 45mA idle current. Reconnect TP7.   |
| Input of RF wattmeter and 50-ohm, 25 watt dummy load to antenna input. No modulation.                               | Ch. 19, USB<br>Mike Gain MINIMUM                 | VRS    | CARRIER BALANCE<br>Adjust for MINIMUM RF output. Check LSB and readjust if necessary for MINIMUM RF output. |
| Input of RF wattmeter and 50-ohm, 25 watt dummy load to antenna input. Inject a two tone, 50mV signal at Mic input. | Ch. 19, USB<br>Mike Gain Maximum                 | VR7    | RF ALC<br>Adjust for 11.0 watts PEP RF output maximum.  |
| Input of RF wattmeter and 50-ohm, 25 watt dummy load to antenna input. No modulation.                               | Ch. 19, AM<br>Mike Gain MINIMUM                  | VR6    | AM POWER<br>Adjust for 4.0 watts RF output maximum.   |
| Input of RF wattmeter and 50-ohm, 25 watt dummy load to antenna input. No modulation.                               | Ch. 19, AM<br>Mike Gain MINIMUM<br>S/RF/MOD S/RF | VR10   | RF PWR METER<br>Adjust so that PWR meter agrees with RF wattmeter.  |

**TRUTH CHART**

| C<br>H<br>A<br>N<br>N<br>E<br>L | 1 = 7.98 Volts      0 = 0 Volts   |    |    |    |    |    |  |  | D<br>I<br>V<br>I<br>D<br>E<br>R<br>I<br>N<br>P<br>U<br>T<br>I<br>N<br>M<br>H<br>z<br>A<br>T<br>T<br>P<br>1<br>0 | A<br>M<br>R<br>E<br>C<br>V<br>C<br>O<br>O<br>U<br>T<br>P<br>U<br>T<br>I<br>N<br>M<br>H<br>z<br>A<br>T<br>T<br>P<br>1 | U<br>S<br>B<br>R<br>E<br>C<br>V<br>C<br>O<br>O<br>U<br>T<br>P<br>U<br>T<br>I<br>N<br>M<br>H<br>z<br>A<br>T<br>T<br>P<br>1 | L<br>S<br>B<br>R<br>E<br>C<br>V<br>C<br>O<br>O<br>U<br>T<br>P<br>U<br>T<br>I<br>N<br>M<br>H<br>z<br>A<br>T<br>T<br>P<br>1 |
|---------------------------------|---|----|----|----|----|----|--|--|---|--|---|---|
|                                 | I<br>C<br>2<br>P<br>R<br>O<br>G<br>R<br>A<br>M<br>D<br>I<br>V<br>I<br>D<br>E<br>R |    |    |    |    |    |  |  |   |  |   |   |
|                                 | P<br>I<br>N<br>S  |    |    |    |    |    |  |  |   |  |   |   |
|                                 | 11  | 12 | 13 | 14 | 15 | 16 |  |  |   |  |   |   |
| 1                               | 0   | 0  | 1  | 1  | 1  | 1  |  |  | 1.430   | 34.765   | 34.7675   | 34.7625   |
| 2                               | 0   | 1  | 0  | 0  | 0  | 0  |  |  | 1.440   | 34.775   | 34.7775   | 34.7725   |
| 3                               | 0   | 1  | 0  | 0  | 0  | 1  |  |  | 1.450   | 34.785   | 34.7875   | 34.7825   |
| 4                               | 0   | 1  | 0  | 0  | 1  | 1  |  |  | 1.470   | 34.805   | 34.8075   | 34.8025   |
| 5                               | 0   | 1  | 0  | 1  | 0  | 0  |  |  | 1.480   | 34.815   | 34.8175   | 34.8125   |
| 6                               | 0   | 1  | 0  | 1  | 0  | 1  |  |  | 1.490   | 34.825   | 34.8275   |   |
| 7                               | 0   | 1  | 0  | 1  | 1  | 0  |  |  | 1.500   | 34.835   | 34.8375   | 34.8225   |
| 8                               | 0   | 1  | 1  | 0  | 0  | 0  |  |  | 1.520   | 34.855   | 34.8575   | 34.8325   |
| 9                               | 0   | 1  | 1  | 0  | 0  | 1  |  |  | 1.530   | 34.865   | 34.8675   | 34.8525   |
| 10                              | 0   | 1  | 1  | 0  | 1  | 0  |  |  | 1.540   | 34.875   | 34.8775   | 34.8625   |
| 11                              | 0   | 1  | 1  | 0  | 1  | 1  |  |  | 1.550   | 34.885   | 34.8875   | 34.8725   |
| 12                              | 0   | 1  | 1  | 1  | 0  | 1  |  |  | 1.570   | 34.905   | 34.9075   | 34.8825   |
| 13                              | 0   | 1  | 1  | 1  | 1  | 0  |  |  | 1.580   | 34.915   | 34.9175   | 34.9025   |
| 14                              | 0   | 1  | 1  | 1  | 1  | 1  |  |  | 1.590   | 34.925   | 34.9275   | 34.9125   |
| 15                              | 1   | 0  | 0  | 0  | 0  | 0  |  |  | 1.600   | 34.935   | 34.9375   | 34.9225   |
| 16                              | 1   | 0  | 0  | 0  | 1  | 0  |  |  | 1.620   | 34.955   | 34.9575   | 34.9325   |
| 17                              | 1   | 0  | 0  | 0  | 1  | 1  |  |  | 1.630   | 34.965   | 34.9675   | 34.9525   |
| 18                              | 1   | 0  | 0  | 1  | 0  | 0  |  |  | 1.640   | 34.975   | 34.9775   | 34.9625   |
| 19                              | 1   | 0  | 0  | 1  | 0  | 1  |  |  | 1.650   | 34.985   | 34.9875   | 34.9725   |
| 20                              | 1   | 0  | 0  | 1  | 1  | 1  |  |  | 1.670   | 34.005   | 35.0075   | 34.9825   |
| 21                              | 1   | 0  | 1  | 0  | 0  | 0  |  |  | 1.680   | 35.015   | 35.0175   | 35.0025   |
| 22                              | 1   | 0  | 1  | 0  | 0  | 1  |  |  | 1.690   | 35.025   | 35.0275   | 35.0125   |
| 23                              | 1   | 0  | 1  | 1  | 0  | 0  |  |  | 1.720   | 35.055   | 35.0575   | 35.0225   |
| 24                              | 1   | 0  | 1  | 0  | 1  | 0  |  |  | 1.700   | 35.035   | 35.0375   | 35.0525   |
| 25                              | 1   | 0  | 1  | 0  | 1  | 1  |  |  | 1.710   | 35.045   | 35.0475   | 35.0325   |
| 26                              | 1   | 0  | 1  | 1  | 0  | 1  |  |  | 1.730   | 35.065   | 35.0675   | 35.0425   |
| 27                              | 1   | 0  | 1  | 1  | 1  | 0  |  |  | 1.740   | 35.075   | 35.0775   | 35.0625   |
| 28                              | 1   | 0  | 1  | 1  | 1  | 1  |  |  | 1.750   | 35.085   | 35.0875   | 35.0725   |
| 29                              | 1   | 1  | 0  | 0  | 0  | 0  |  |  | 1.760   | 35.095   | 35.0975   | 35.0825   |
| 30                              | 1   | 1  | 0  | 0  | 0  | 1  |  |  | 1.770   | 35.105   | 35.1075   | 35.0925   |
| 31                              | 1   | 1  | 0  | 0  | 1  | 0  |  |  | 1.780   | 35.115   | 35.1175   | 35.1025   |
| 32                              | 1   | 1  | 0  | 0  | 1  | 1  |  |  | 1.790   | 35.125   | 35.1275   | 35.1125   |
| 33                              | 1   | 1  | 0  | 1  | 0  | 0  |  |  | 1.800   | 35.135   | 35.1375   | 35.1225   |
| 34                              | 1   | 1  | 0  | 1  | 0  | 1  |  |  | 1.810   | 35.145   | 35.1475   | 35.1325   |
| 35                              | 1   | 1  | 0  | 1  | 1  | 0  |  |  | 1.820   | 35.155   | 35.1575   | 35.1425   |
| 36                              | 1   | 1  | 0  | 1  | 1  | 1  |  |  | 1.830   | 35.165   | 35.1675   | 35.1525   |
| 37                              | 1   | 1  | 1  | 0  | 0  | 0  |  |  | 1.840   | 35.175   | 35.1775   | 35.1625   |
| 38                              | 1   | 1  | 1  | 0  | 0  | 1  |  |  | 1.850   | 35.185   | 35.1875   | 35.1725   |
| 39                              | 1   | 1  | 1  | 0  | 1  | 0  |  |  | 1.860   | 35.195   | 35.1975   | 35.1825   |
| 40                              | 1   | 1  | 1  | 0  | 1  | 1  |  |  | 1.870   | 35.205   | 35.2075   | 35.1925   |

PRESIDENT MODEL 1001002, WASHINGTON



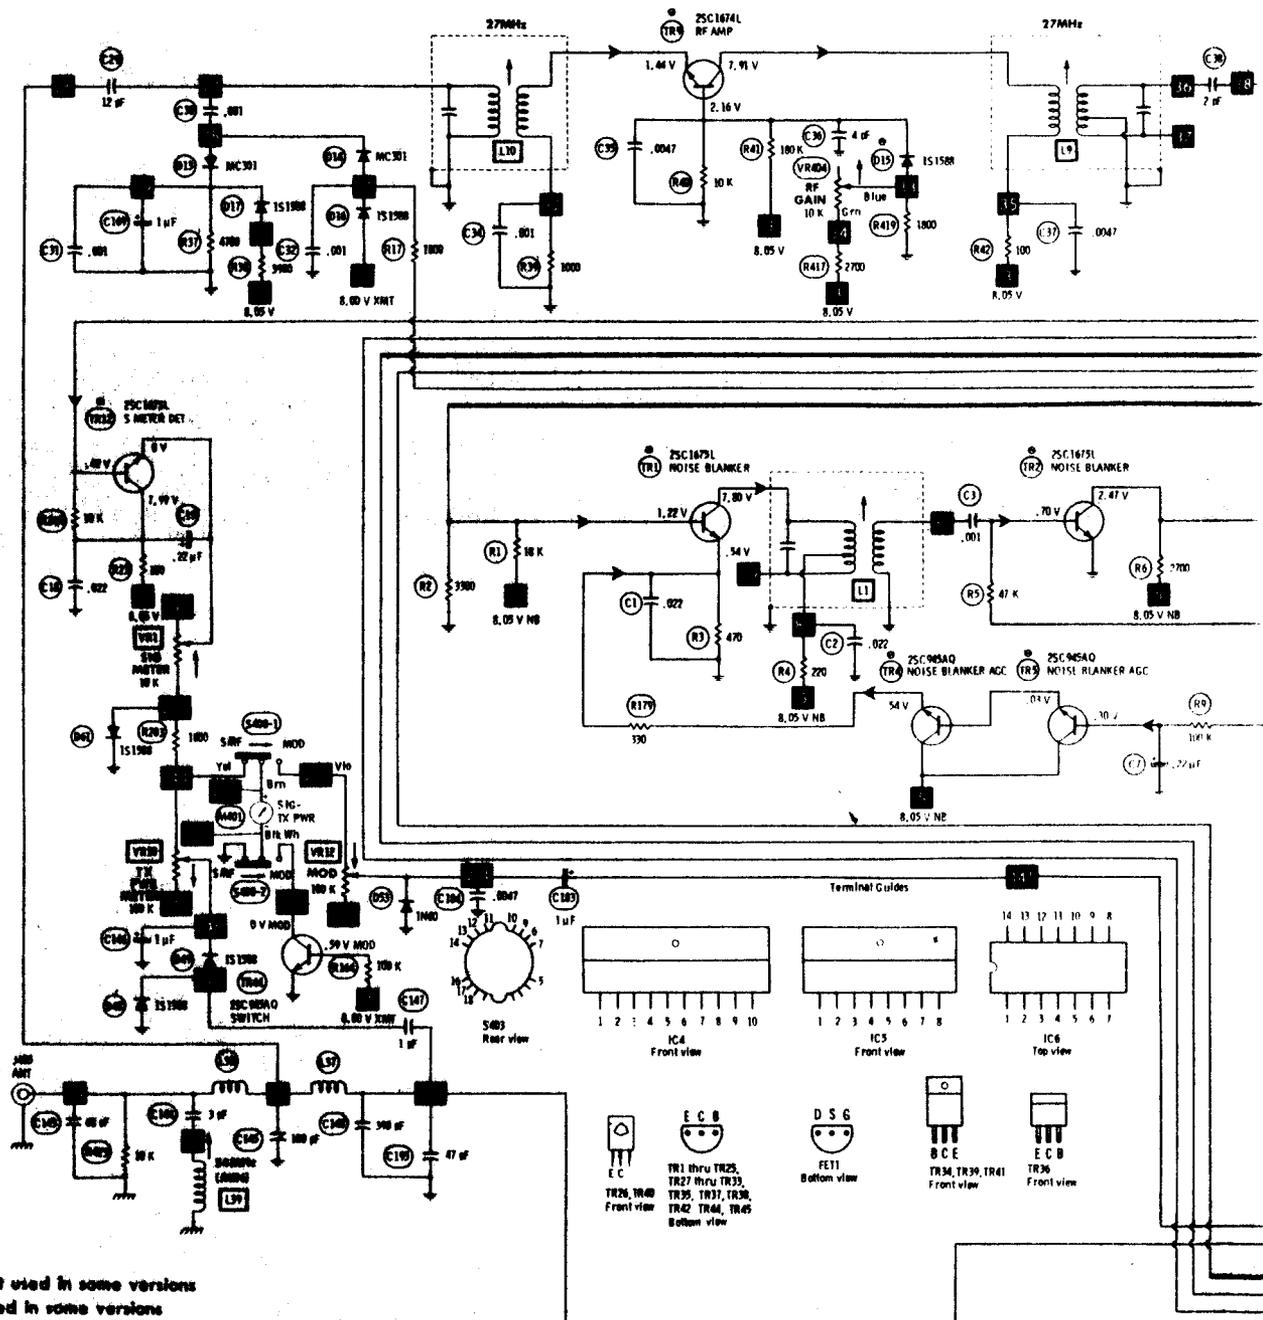






- Circuitry not used in some versions
- - - Circuitry used in some versions
- See parts list
- \* Nominal value
- ⊕ Ground
- ⊞ Chassis
- ◇ Common fit point
- Signal path
- ↔ Voltage path


Measurements made in Channel 1 with switching as shown unless noted.  
 Test numbers in rectangles appear in the alignment/adjustment instructions.  
 Supply voltage maintained as shown at input.  
 Voltages measured with digital meter, no signal.  
 Controls adjusted for normal operation.  
 Arrow at control indicates direction of advance.  
 Terminal identification may not be found on unit.  
 Resistors are 1/2W or less, 5% unless noted.  
 Value in ( ) used in some versions.

A PHOTOFAC STANDARD NOTATION SCHEMATIC  
 WITH **CIRCUITACE**


© Howard W. Sams & Co., Inc. 1978

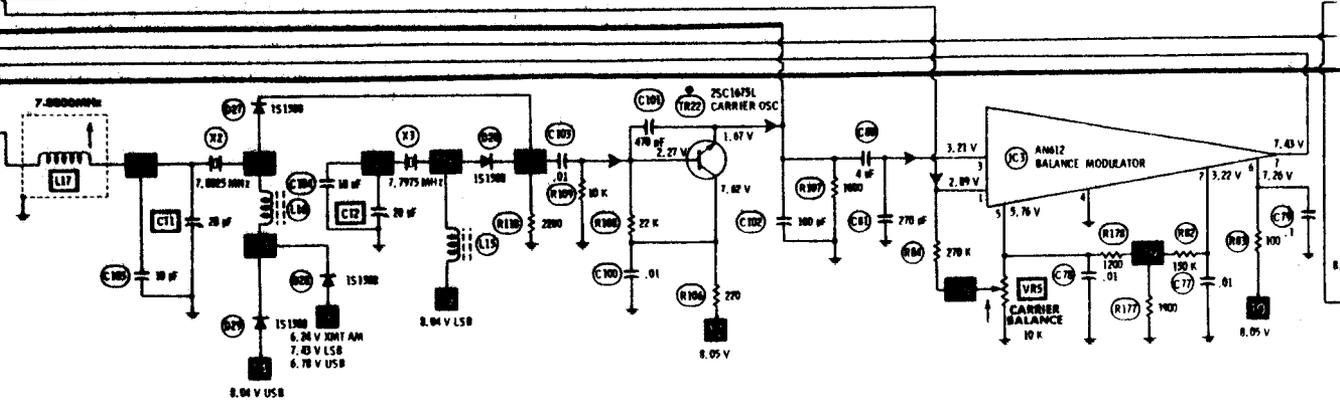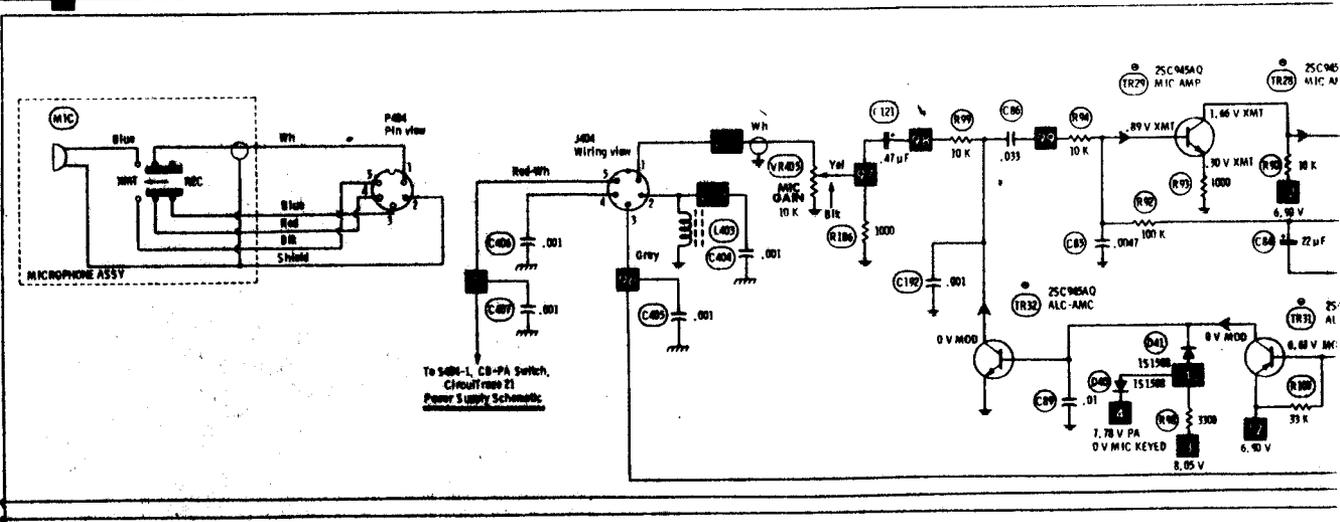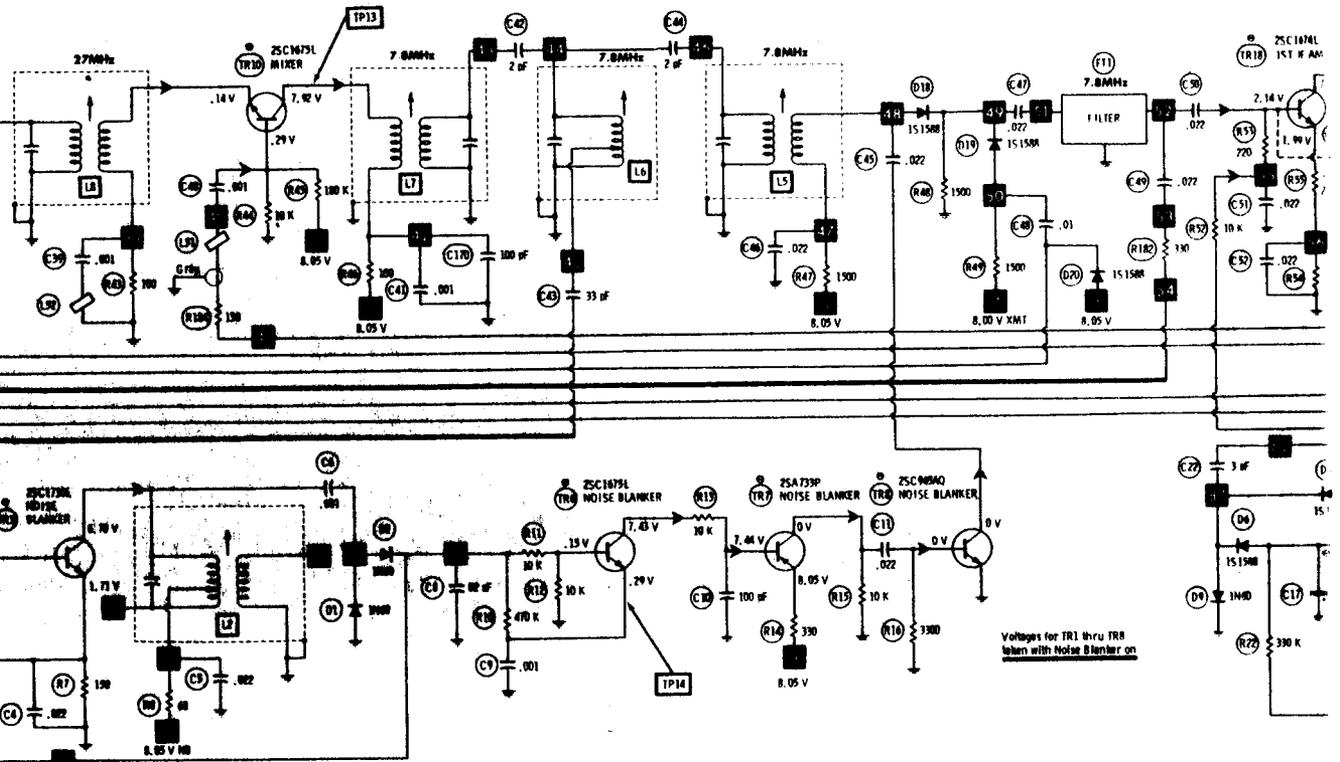

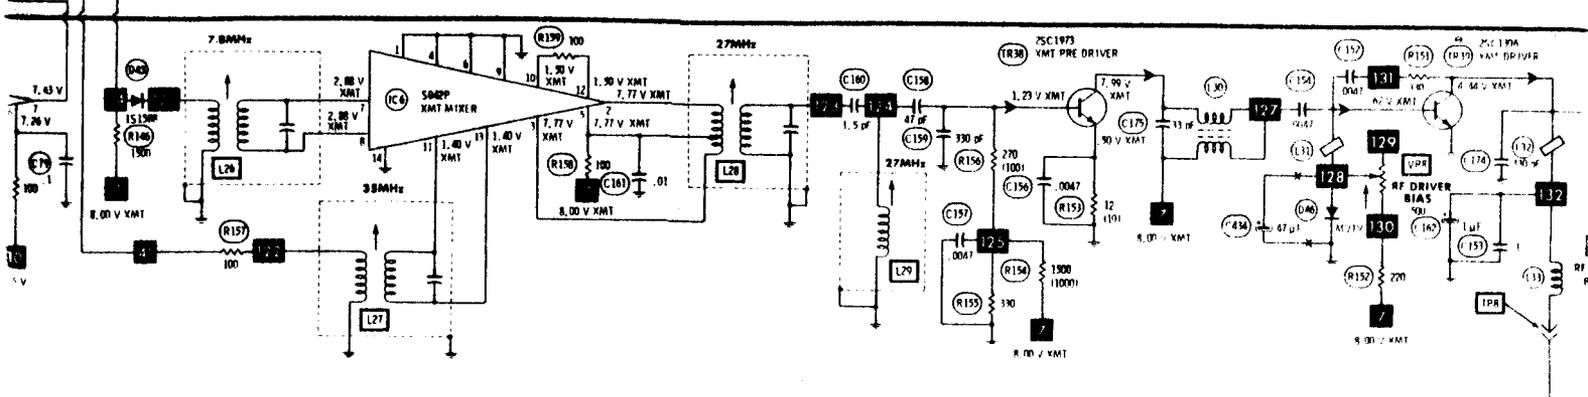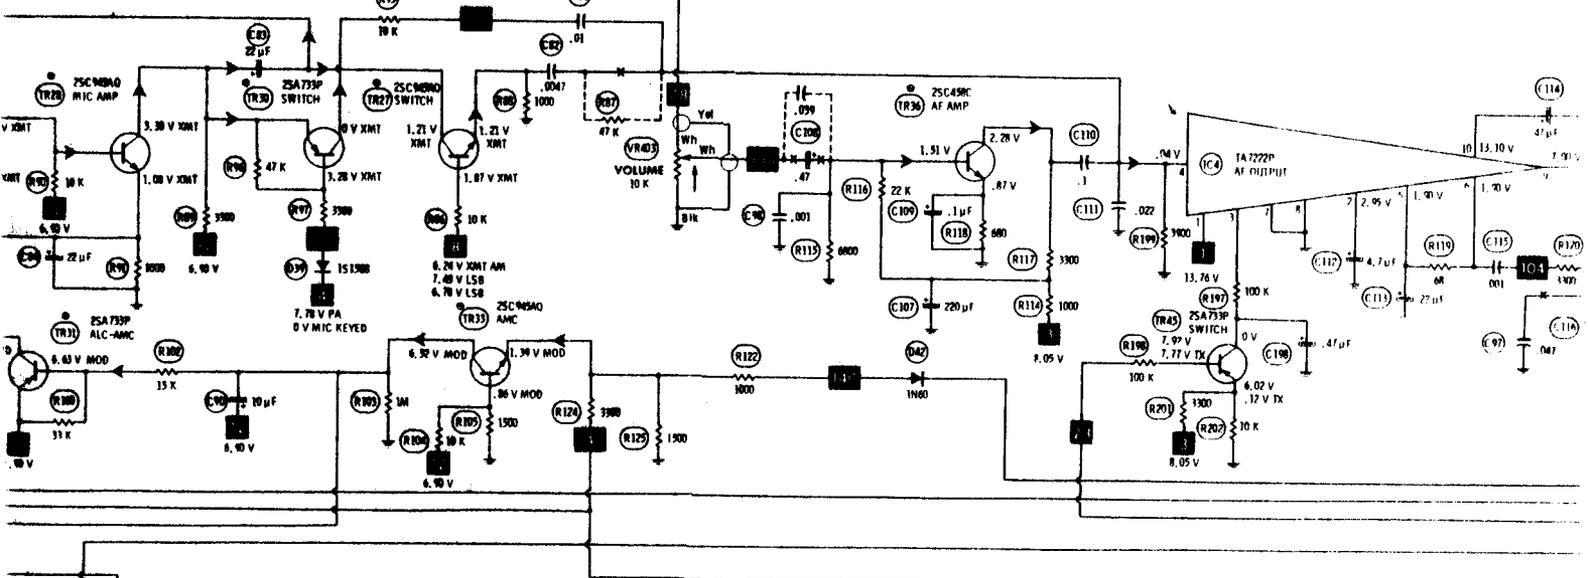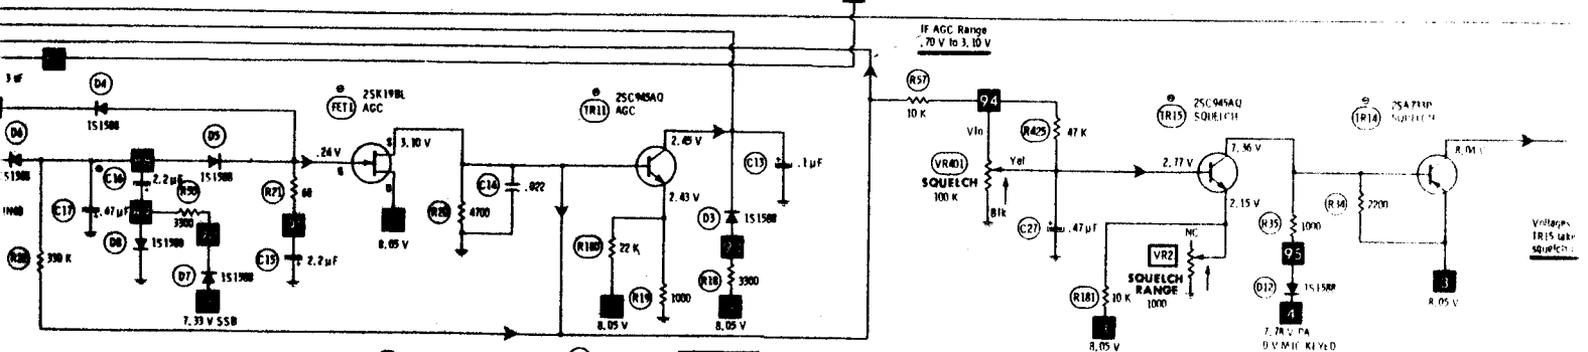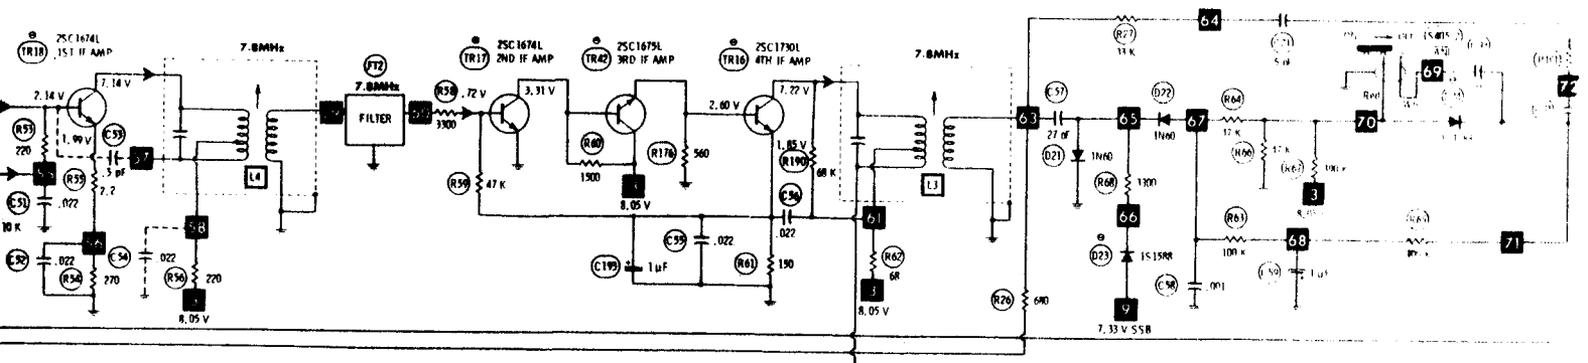

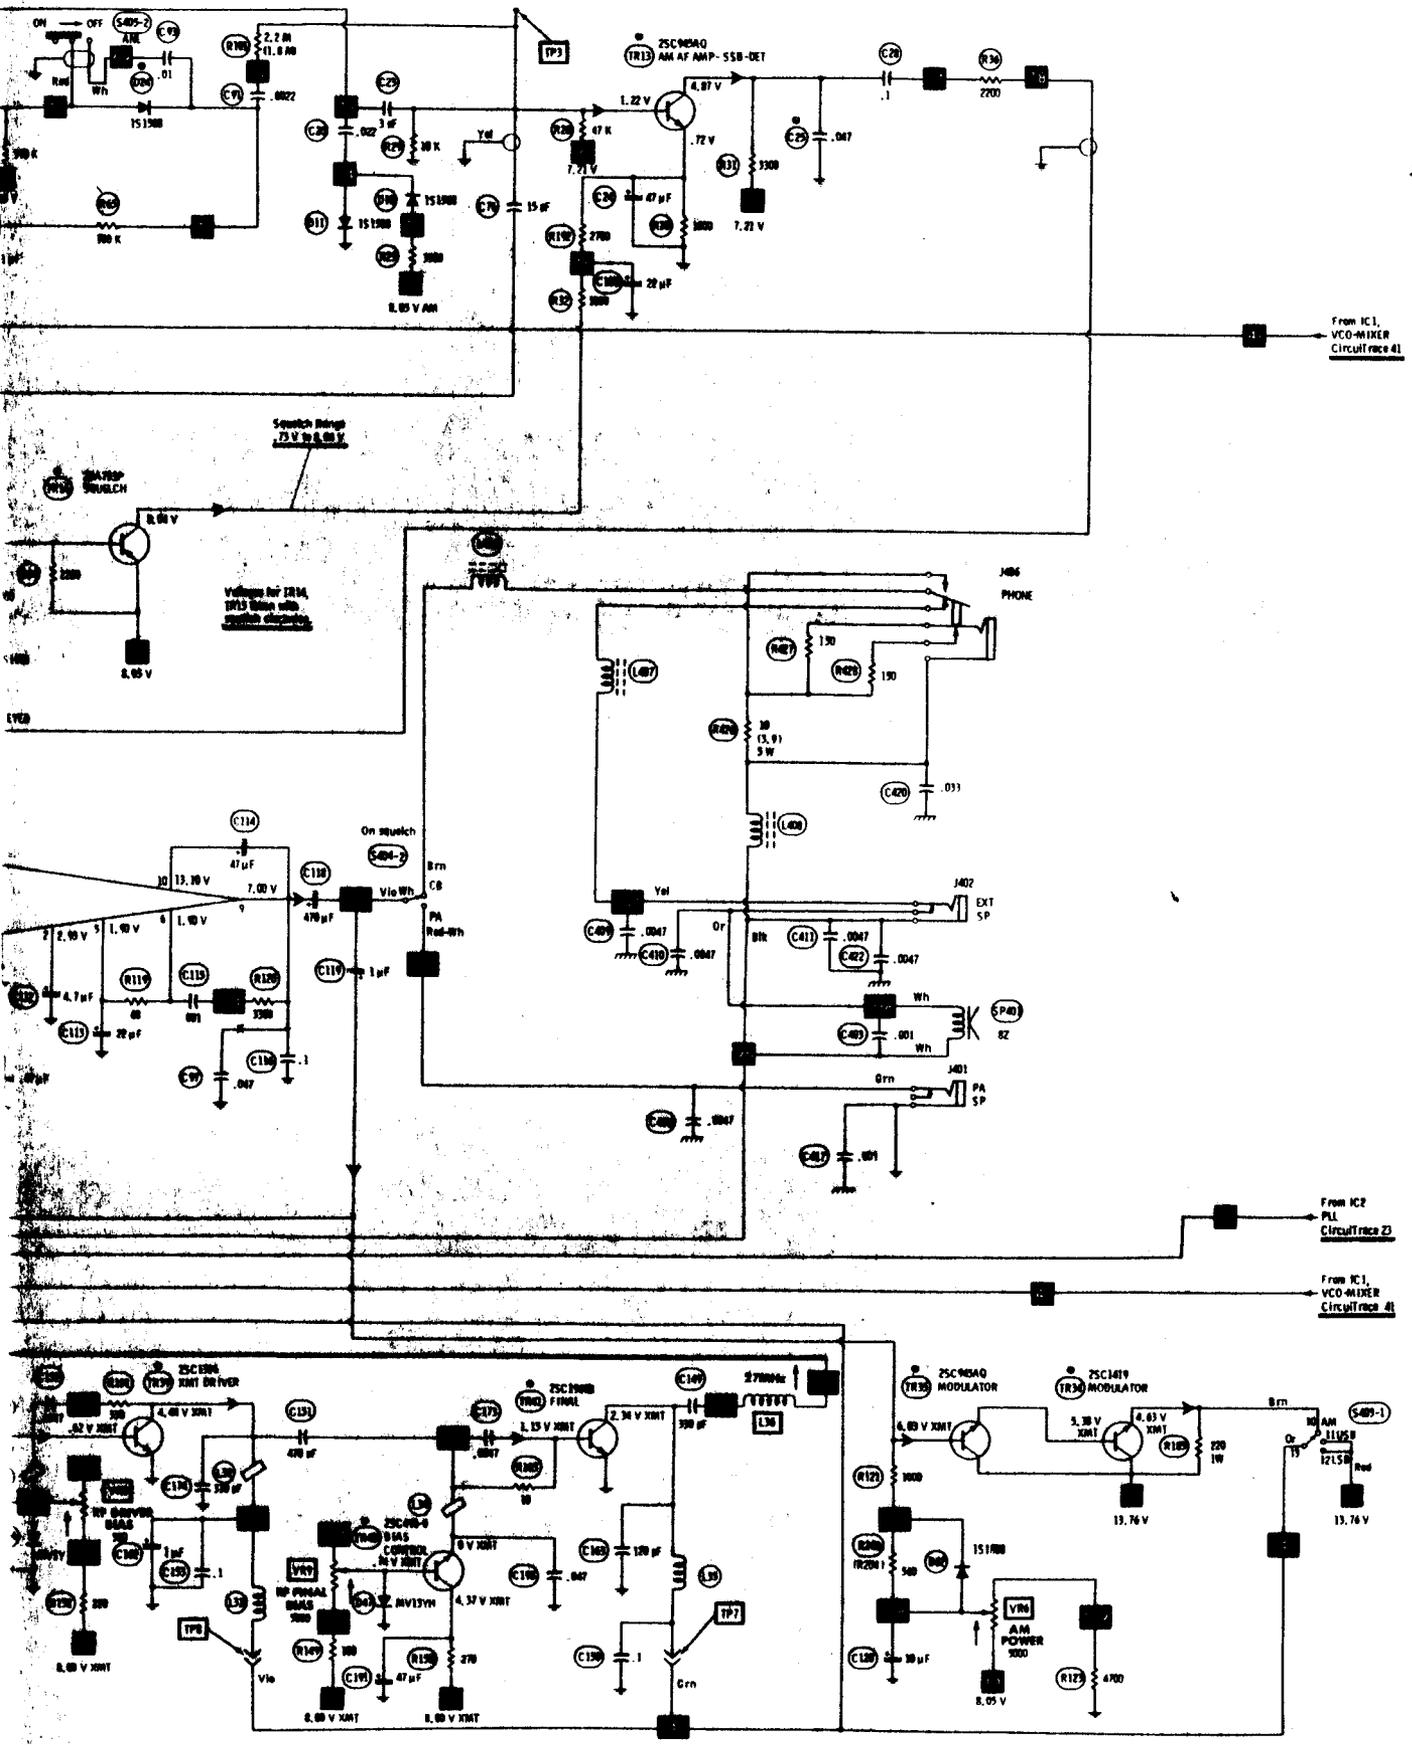

PRESIDENT MODEL 1001002, WASHINGTON

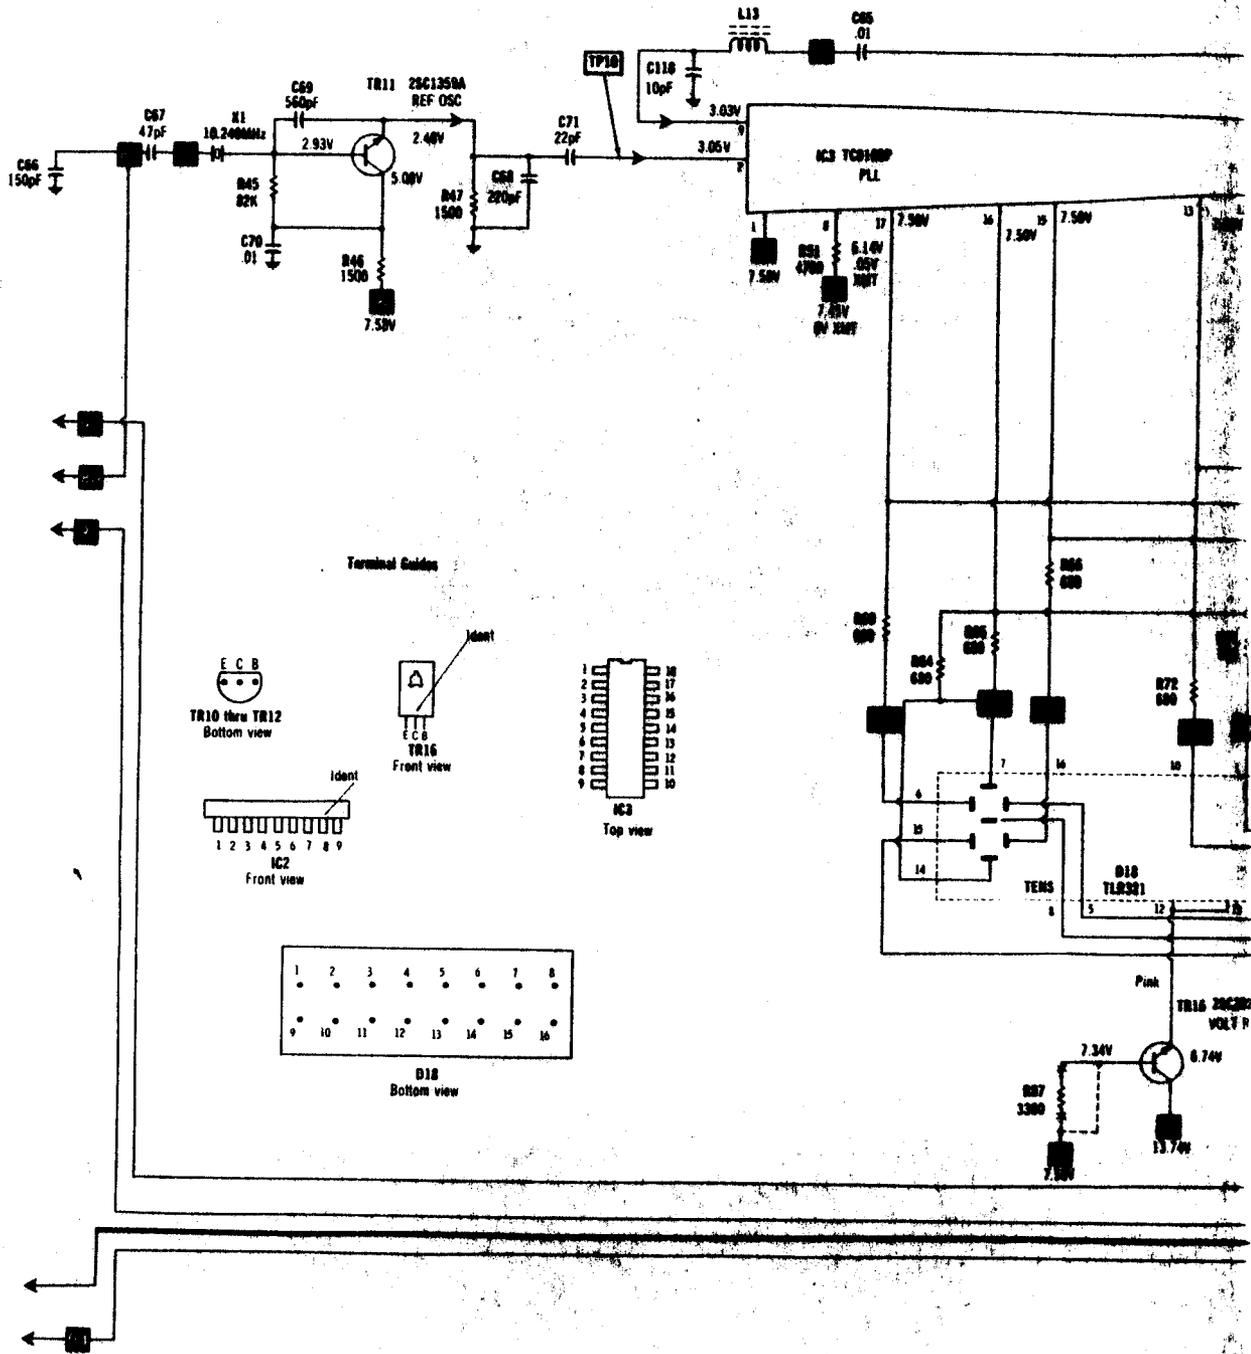

- \*— Circuitry not used in some versions
- - - Circuitry used in some versions
- ⊙ See parts list
- ⊛ Nominal value
- ⊕ Ground
- ⊞ Chassis
- ▽ Common tie point
- ← Signal path
- ↔ Voltage path

Measurements made in Channel 1 with switching as shown unless noted. Item numbers in rectangles appear in the alignment/adjustment instructions. Supply voltage maintained as shown at input. Voltages measured with digital meter, no signal. Controls adjusted for normal operation. Arrow at control indicates direction of advance. Terminal identification may not be found on unit. Resistors are 1/2W or less, 5% unless noted. Value in ( ) used in some versions.

