

 Pinell of Norway



User Manual

COMPACT

DAB/DAB+ / FM / Bluetooth

Safety instructions

Please store this instruction manual for future reference.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.

WARNING: The direct plug-in adapter is used as disconnect device, the disconnect device shall remain readily operable.



- This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

WARNING: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.

- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.
- No naked flame sources, such as lighted candles, should not be placed on the apparatus.
- Do not use this product near water or moisture.
- Clean only with a dry cloth.
- Unplug this product from the wall outlet before cleaning.
- Place the unit on a solid surface.
- Do not put it in a closed bookcase or a cabinet that may keep air from flowing through its ventilation openings.
- Do not install near any heat sources, such as radiators, heat registers, stoves or other appliances that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs and the point where they exit from the product.
- Servicing is required when the product has been damaged. Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltages or other hazards. Please contact the manufacturer to be referred to an authorized service center near you.
- To prevent risk of fire or electric shock, avoid over loading wall outlets, extension cords, or integral convenience receptacles.
- Do not let objects or liquids enter the product.
- Use proper power sources. Plug the product into a proper power source, as described in the operating instructions or as marked on the product.

Table of Contents

Safety instructions	2
Table of Contents	3
Features	4
Carton contents	4
Controls, connectors and display.....	5
Front view.....	5
Rear view	6
Getting started	7
Preset stations	7
Recall stations.....	7
DAB radio mode	8
Selecting stations	8
Station List	8
Station Search.....	8
Manual Tune	8
Prune Invalid	8
DRC (Dynamic range compression)	8
FM radio mode.....	9
Selecting stations	9
Scan Setting.....	9
Bluetooth mode.....	10
AUX In mode	10
System Settings.....	11
Equaliser	11
Brightness	11
Sleep	11
Alarm and Snooze.....	12
Time/Date.....	12
Language	12
Factory Reset.....	12
Software Version	12
Technical specifications	13

Features

DAB/DAB+ - digital radio with a wide choice of channels and digital quality sound

FM - analog radio with RDS (Radio Data System)

Bluetooth - streaming music and control from Smart device

AUX In - connect other audio equipment


Carton contents

Carefully remove your radio from the packaging. You can keep the packaging for later use:

- 1x ***Pinell Compact*** unit
- USB charging cable
- Quick start guide


Controls, connectors and display

Front view

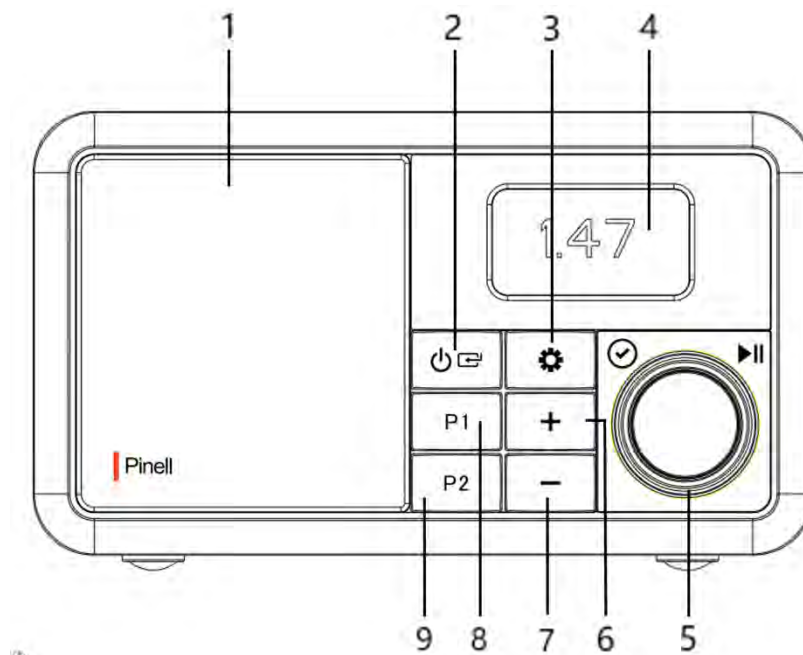

- | | |
|---|--|
| <p>1 Speaker</p> <p>2  Power On/Off and Mode</p> <ul style="list-style-type: none"> - short press to view the clock when the radio is power off - long press to power on/off - short press to switch Mode: DAB / FM / Bluetooth / AUX in <p>3  System settings</p> <ul style="list-style-type: none"> - short press to enter the menu - rotate and press  to select mode options and System Settings composed of: Equaliser, Brightness, Sleep, Alarm, Time/Date, Language, Factory Reset, Software Version <p>4 Display</p> <p>5  Volume, Play/Pause/Confirmation</p> <ul style="list-style-type: none"> - pause the track by short press - play the track by short press - confirm the menu - rotate to change the volume | <p>6 + Button</p> <ul style="list-style-type: none"> - short press to view station list - long press to scan the FM frequency - short press to increase FM frequency <p>7 - Button</p> <ul style="list-style-type: none"> - short press to recall from preset station - long press to scan the frequency - short press to decrease frequency - short press to play previous track in Bluetooth/ AUX In mode <p>8 P1 – Preset 1</p> <ul style="list-style-type: none"> - long press to store a station - short press to view the preset station <p>9 P2 – Preset 2</p> <ul style="list-style-type: none"> - long press to store a station - short press to view the preset station |
|---|--|

Rear view

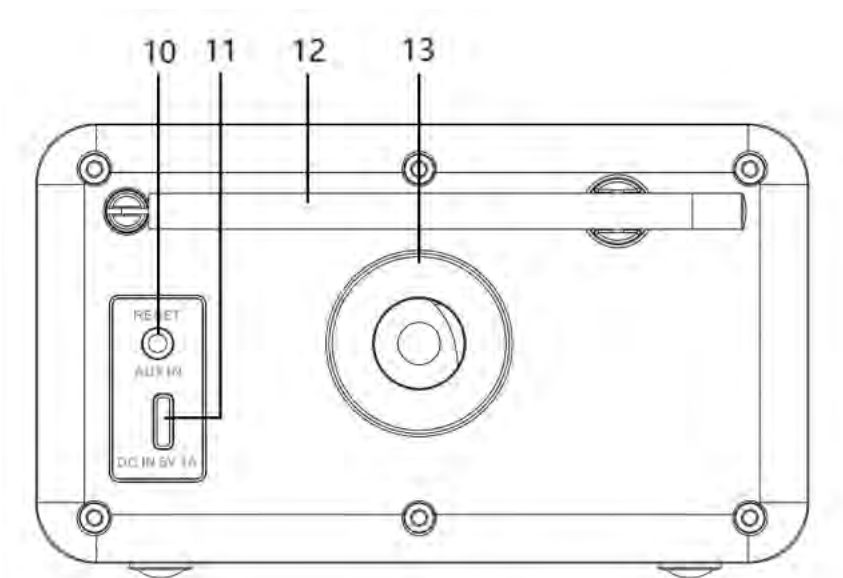

- 10 AUX IN / RESET *)
- 11 USB power in (5V)
- 12 Rod antenna
- 13 Opening for subwoofer

*) Battery reset: If the device switches to battery protection mode and cannot be switched on, insert the end of a paper clip into the hole and hold it in place until the device restarts.

Getting started

Pinell Compact is easy to use. To play DAB or FM radio, all you need is a power source (integrated rechargeable batteries or USB power).

Quick setup

Fully extend the telescopic antenna to ensure good reception in both DAB and FM Radio modes. It may be necessary to alter the position of the DAB Digital radio and/or the telescopic antenna to achieve the best signal.

1. Connect the USB cable to the input at the back of your **Pinell Compact** and plug the cable into a USB powers adapter
2. Fully extend the rear telescoping antenna
3. Long press  to turn your **Pinell Compact** on
4. Press  repeatedly to select the desired source > press 

Turn ON / OFF or set to Standby

Power on: long press 

Power off/standby: long press 

Source: Press  repeatedly to cycle through the sources: DAB radio, FM radio, Bluetooth, AUX In.

Preset stations

There are 40 DAB presets and 40 FM presets.

 > turn and press  > **Preset Save** > press and turn to select the storage position > press 

P1 and P2 buttons offer direct access to the first two storage positions.

Long press P1 or P2 to store a station.

Recall stations

 > turn and press  > **Preset Recall** > press and turn to select the storage position > press 

P1 and P2 buttons offer direct access to the first two storage positions.

Short press to recall a preset station.

Note: If you choose a preset that hasn't been allocated a station, then "Preset Empty" will be displayed.

DAB radio mode

DAB radio mode receives DAB/DAB+ digital radio and displays information about the station, stream and track playing.

Press  repeatedly to cycle through the sources and select **DAB radio**.

Menu options: Station List, Station Search, Preset Recall, Preset Save, Manual Tune, Prune Invalid, DRC, System Settings.

Selecting stations

To select a station, press + or - > turn 

Station List

 > turn and press  > **Station List**

Station Search

 > turn and press  > **Station Search**

Full scan starts automatically. Once a scan is completed, the radio returns to play the previously selected station or first station on the station list.

Manual Tune

This can help you when adjusting your antenna or when adding stations that were missed while auto tuning.

 > turn and press  > **Manual Tune** > turn and press 

Prune Invalid

You may remove all unavailable stations from the station list.

 > turn and press  > **Prune Invalid** > turn and press  to select "Yes" or "No" > press 

DRC (Dynamic range compression)

DRC reduces the difference between the loudest and quietest audio being broadcast. Effectively, this makes quiet sounds comparatively louder and loud sounds comparatively quieter.

Options: High / Low / Off

 > turn and press  > **DRC** > turn and press 

Note: DRC only works if it is enabled by the broadcaster for a specific station.

FM radio mode

FM radio mode receives analogue radio from the FM band and displays RDS (Radio Data System) information about the station.

Press  repeatedly to cycle through the sources and select **FM radio**

Menu options: Preset Save, Preset Recall, Station Search, Scan Setting, and System Settings.

Selecting stations

To select a station, press + or - > turn 

Scan Setting

This enables you set FM scans to stop at stations with strong signal or stop at any available station.

Options:

Strong stations only / All stations

 > turn and press  > **Scan Setting** > turn and press 

Bluetooth mode

You can pair your radio with a Bluetooth device to stream content.

Prior to pairing, verify your device supports Bluetooth 5.3 and your device is not connected to any other Bluetooth product. Devices may pair differently. Below is a general guide:

1. Press  repeatedly to cycle through the sources and select **Bluetooth**
2. Turn on the Bluetooth on your enabled device
3. Select the Bluetooth device name “Pinell Compact” when it appears on your device’s screen
4. You can start streaming wirelessly. Adjust the volume level on your device

You should not have to pair your device again.

Depending on your device, you may need to make multiple attempts at pairing and/or connecting to “Pinell Compact”, but please give your device adequate time to pair or connect before repeating the process.

AUX In mode

Audio equipment can be connected and amplified via the radio.

Plug one end of a 3.5 mm jack cable into the AUX IN connection on the back of the radio. Connect the other end of the cable to the audio output of your external device.

Press  repeatedly to cycle through the sources and select **AUX In**

The volume can be adjusted using the volume control  on the radio or the controls on the connected audio output device.

System Settings

Menu options:

- Equaliser
- Brightness
- Sleep
- Alarm
- Time/Date
- Language
- Factory Reset
- Software Version

Equaliser

This feature enables you to choose option “Music” or “Vocal”.

 > press  > **Equaliser** > select your option > press 

Brightness

This radio display has a backlight with adjustable brightness level.

 > turn and press  > **Brightness** > select your options > press 

Options:

Timeout: Off - During operation, brightness always remains as set in "On level"
After 10 / 20 / 30 / 45 / 60 / 90 / 120 / 180 seconds, brightness will be set according to “Dim level”

On level: High / Medium / Low

Dim level: High / Medium / Low / Off

Sleep

When listening to the radio you can set a period of time before the radio enters “standby” mode.

Note: the radio must be active and not in “standby” mode already.

 > turn and press  > **Sleep** > select your option > press 

Options:

5 / 10 / 15 / 30 / 60 / 90 / 120 minutes or Sleep Timer Off

Alarm and Snooze

Your radio includes dual alarms.

 > turn and press  > **Alarm** > select your options > press  to confirm.

Options:

- **Alarm:** Off / On
- **Frequency:** Once, Weekends, Weekdays, Daily
- **Wake Up Time:** set as required
- **Source:** Buzzer, Digital Radio, FM
- **Preset:** Last listened or select channel
- **Duration:** 15 / 30 / 45 / 60 / 90 / 120 sec
- **Volume:** 4 to 16

Press  to snooze for 10 min or press  to cancel the alarm.

Note: Alarm and Snooze functions are only available in “standby” mode.

Time/Date

 > turn and press  > **Time/Date** > select your options > press 

Options:

- Set Time/Date: set day / month / year / hour / minute > Time Saved
- Auto update options: Update from Any / Digital Radio / FM / No Update
- Set date format: DD-MM-YYY or MM-DD-YYYY

Language

This feature enables you to change menu language.

 > turn and press  > **Language** > select your option > press 

Factory Reset

This function clears all user defined settings, replacing them with the original default values, so time/date, preferences/settings, station list and preset stations are all lost.

 > turn and press  > **Factory Reset** > select your option > press 

Software Version

This is used to display the current software version.

 > turn and press  > **Software Version** > shows your current software version

Technical specifications

Model: ***Pinell Compact***

Type: Portable Radio

Speaker: 1 x full range

Power: 2W RMS

Power Supply: Integrated rechargeable battery (up to 8h playback) or USB power

Dimension (mm): W 128 x D 89 x H 75 mm

Weight: 0,42 kg



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. For more information, please contact the local authority or your retailer where you purchased the product.



The product is CE certified. The manufacturer assures that this product will only be placed on the market in conformity with the LVD, EMC, RED and RoHS directives.

Declaration of conformity: www.pinell.com/certificates

* Information in this manual is subject to change without notice.

Pinell is a label of Modino AS (www.modino.no)
Trondheimsveien 183, 2020 Skedsmokorset, Norway (email: Support@pinell.no)