

WS1025

200 Channel VHF/Air/UHF Desktop Scanner

OWNER'S MANUAL




WHISTLER

TABLE OF CONTENTS

| | |
|---|----|
| Package Contents | 3 |
| Scanning Legally..... | 3 |
| Features..... | 4 |
| Scanner Basics..... | 5 |
| Setup | 6 |
| Connecting the Antenna | 6 |
| Connecting a Speaker or Headphones | 7 |
| Powering Your Scanner..... | 7 |
| Turning on the Scanner | 7 |
| Turning Off the Key Tone..... | 8 |
| Understanding the Display | 8 |
| Understanding the Keypad | 10 |
| Configuring Your Scanner..... | 12 |
| Preprogrammed Frequencies | 12 |
| Programming Channels..... | 12 |
| Programming with a Computer | 13 |
| Cloning Programmed Data..... | 13 |
| Searching for Frequencies..... | 14 |
| Service Bank Search..... | 14 |
| Storing Found Frequencies | 14 |
| Birdie Frequencies..... | 15 |
| Scanning Stored Channels..... | 15 |
| Monitoring a Channel..... | 17 |
| Locking Out Channels | 18 |
| Clearing a Stored Channel | 18 |
| Weather Features | 19 |
| Receiving All Weather Alerts | 19 |
| Receiving Alerts for Specific Areas | 19 |
| SAME Standby Mode | 20 |
| Skywarn™ | 21 |
| Additional Information | 22 |
| Care | 22 |
| Initializing the Scanner..... | 22 |
| Preprogrammed Frequency List | 23 |
| Service Banks | 26 |
| Specifications..... | 29 |
| FCC Notice..... | 30 |
| Limited Warranty | 31 |

INTRODUCTION

WELCOME

Thank you for choosing a Whistler product. We are dedicated to providing products that represent both quality and value. Please read the user manual carefully before using this product. If you have additional questions, please visit the FAQ page on our website at www.whistlergroup.com or call toll free 800-531-0004, 8am to 5pm CT, Monday through Friday to speak to a Customer Service Representative.

Package Contents

- Scanner
- Antenna
- AC Adapter
- User's Guide
- Quick Start Guide

Scanning Legally

Your scanner covers frequencies used by many different groups including police and fire departments, ambulance services, government agencies, private companies, amateur radio services, military operations, pager services, and wireline (telephone and telegraph) service providers. It is legal to listen to almost every transmission your scanner can receive. However, there are some transmissions you should never intentionally listen to.

These include:

- Telephone conversations (cellular, cordless, or other private means of telephone signal transmission)
- Pager transmissions
- Any scrambled or encrypted transmissions

According to the Electronic Communications Privacy Act (ECPA), as amended, you are subject to fines and possible imprisonment for intentionally listening to, using, or divulging the contents of such a transmission unless you have the consent of a party to the communication (unless such activity is otherwise illegal).

FEATURES

This scanner is designed to prevent reception of illegal transmissions, in compliance with the law which requires that scanners be manufactured in such a way as to not be easily modifiable to pick up those transmissions. Do not open your scanner's case to make any modifications that could allow it to pick up transmissions that are not legal to listen to. Doing so could subject you to legal penalties.

In some areas, mobile use of this scanner is unlawful or requires a permit. Check the laws in your area. We encourage responsible, legal scanner use.

Features

Your new WS1025 Desktop Scanner lets you scan conventional transmissions, and is preprogrammed with search banks for convenience. By pressing a one touch search key, you can quickly search those frequencies most commonly used by public service and other agencies without tedious and complicated programming.

This scanner gives you direct access to over 26,000 exciting frequencies, including those used by ambulance services, aircraft, and amateur radio services, marine, civil air patrol, VHF and UHF business bands, government frequencies and some police and fire departments.

Your scanner also has these special features:

One-Touch Service Search Banks – Lets you search preset frequencies in separate marine, fire/police, aircraft, ham, FM Radio and weather bands.

Display Backlight – Easy to read in low-light situations.

Lockout Function – Lets you skip specified channels or frequencies when scanning or searching.

Ten Channel-Storage Banks – You can store 20 channels in each bank (200 total channels), letting you group channels so you can more easily identify calls.

SAME/FIPS Weather Alert – Displays weather events for the county or counties that you choose.

Memory Backup – Keeps the frequencies stored in memory for an extended time.

SCANNER BASICS

Scan Delay – Delays scanning for about 2 seconds, so that you can hear replies on the same channel.

Priority Channel – Lets you set the scanner to check one channel every 2 seconds so that you do not miss transmissions on that channel.

Data Cloning – Lets you transfer the programmed data to another WS1025 scanner.

External Antenna Connector – Lets you connect an external antenna (not supplied) with a BNC connector for improved reception of distant/weaker signals.

Scanner Basics

After you familiarize yourself with your scanner's features you can then set up your scanner.

Frequencies

A frequency is the waveband of the transmitting signal (expressed in kHz or MHz). Your WS1025 receives a range of analog frequencies; the best resource for your local frequencies is www.radioreference.com.

Also, you can use your scanner's search functions to find active frequencies in your area.

Your WS1025 scanner can receive these bands:

| Frequency Range | Types of Transmissions |
|-------------------|--|
| 29–54 MHz | 10-Meter Ham, VHF Lo, 6-Meter Ham |
| 87.3–107.9 MHz | FM Broadcast |
| 108–136.99166 MHz | Aircraft |
| 137–174 MHz | Military Land Mobile, 2-Meter Ham, VHF Hi |
| 380–512 MHz | UHF Aircraft, Federal Government, 70-cm Ham, UHF Standard, UHF "T" |

 Note: See "Specifications" on page 29 for more information about frequency steps.

CONNECTING ANTENNA

Channels

Channels are storage areas for frequencies saved in your scanner's memory. Each saved frequency is assigned a channel.

Banks

A bank is a storage area for a group of channels. Your scanner provides 10 banks (1 to 10) that can each store up to 20 channels, for a total of 200 channels. You can use the banks to group and organize frequencies.

For example, you could program the frequencies used by your local police department starting with Channel 1 (the first channel in bank 1) and program the fire department frequencies starting with Channel 21 (the first channel in bank 2).

Setup

Connecting the Antenna

To attach the supplied telescopic antenna, insert the antenna in the hole on the top of the scanner and turn the antenna clockwise to tighten.

Connecting an Outdoor Antenna

To connect an external antenna, follow the installation instructions supplied with the antenna. Use 50 Ohm coaxial cable, such as RG-58 or RG-8. For lengths over 50 feet, use RG-8 low-loss dielectric coaxial cable. If the antenna cable's connector does not have a BNC connector, you will also need a BNC adapter.

⚠ Warning: Use extreme caution when installing or removing an outdoor antenna. If the antenna starts to fall, let it go! It could contact overhead power lines. If the antenna touches a power line, touching the antenna, mast, cable, or guy wires can cause electrocution and death. Call the power company to remove the antenna. DO NOT attempt to do so yourself.

CONNECTING ACCESSORIES

Connecting a Speaker or Headphones

You can plug an amplified speaker or headphones (not supplied) with 1/8 inch (3.5 mm) mini-plug into the **HEADPHONE** jack on the back of the scanner. This automatically disconnects the internal speaker.

Note: Use an amplified speaker with this scanner. Non-amplified speakers do not provide sufficient volume for comfortable listening.

Listening Safely

To protect your hearing, follow these guidelines:

- Do not listen at high volume levels. Extended high-volume listening can lead to permanent hearing loss.
- Set the volume to the lowest setting. Then turn on your audio device and adjust the volume to a comfortable level.
- Avoid increasing the volume. Your ears will adapt to the volume level, so a level that does not cause discomfort could still damage your hearing.

Powering Your Scanner

1. Connect the supplied adapter to the scanner's **DC 9V** jack and a standard power outlet.
2. To disconnect, unplug the adapter from the power source first.

Caution: You must use a Class 2 power source that supplies 9V DC and delivers at least 400mA. Its center tip must be set to positive and its plug must fit the scanner's **DC 9V** jack. Using an adapter that does not meet these specifications could damage the scanner or the adapter.

Turning on the Scanner

1. Turn the **SQUELCH** all the way down before you turn on the scanner.
2. Slide **POWER** to **ON**. A welcome message appears. After about 3 seconds, adjust **VOLUME** to a comfortable level.
3. Turn **SQUELCH** clockwise, just until the hissing sound stops. If you always hear a hissing sound, the scanner will not scan or search properly.
 - To listen to a weak or distant station, turn **SQUELCH** counterclockwise.
 - If reception is poor, turn **SQUELCH** clockwise to cut out weak transmissions.

DISPLAY

Turning Off the Key Tone

The scanner is preset to sound a tone each time you press one of its keys.

To turn the key tone on and off:

1. Turn on the scanner. *WELCOME SCANNING RECEIVER* appears.
2. While the welcome message is on the screen, press **1** to turn on the key tone or press **2** to turn it off.



Understanding the Display

Row 1

- Skywarn channel active.
- FD/PD** – Searching the fire/police bank.
- BANK** – Indicates the scan bank(s). A bar appears under the numbers for banks that are turned on.
- AIR** – Searching the aircraft bank.
- HAM** – Searching the amateur radio bank.

Row 2

- WX** – Searching weather channels.
- FM radio** – Searching for FM radio stations.
- 000** – Channel number the scanner is tuned to.
- CH** – Appears with channel number (1–200) or *P* (priority channel).
- 000.0000** – Frequency the scanner is tuned to.
- MAR** – Searching the marine bank.
- L/O** – A locked out channel/frequency is manually selected or reviewed.

Row 3

- ▲▼ (Up/Down)** – Search or scan direction.
- PRI** – Priority feature is active.
- S** – Signal meter; bars indicate strength of signal.
- MAN** – Manual mode.
- SCAN** – Scan mode.
- SRCH** – Searching a service bank.
- PGM** – Program mode.
- DLY** – Two-second delay is active.

DISPLAY

Display Messages

ALL CH L-out – All channels locked out during scan or marine band search.

b X Ch-FULL – All displayed bank channels are full.

b X StorE – Frequency programmed into displayed bank's channel.

CLOnE – Clone mode.

-dUPL- – Frequency is already stored in another channel.

Error – Entry error.

FLD ALL-CL – All the locked-out frequencies removed during a FD/PD, AIRCRAFT, or HAM bank search.

L-r – Review the locked-out frequencies.

L-D Fr-FULL – Maximum of 50 frequencies already locked out.

oFF tonE – Key tone deactivated.

On tonE – Key tone activated.

P – Scanner is tuned to the priority channel.

-t- – Tune mode.

Sub Bank Messages

Lo VHF – Sub-bank 1 of the fire/police bank.

Hi VHF – Sub-bank 2 of the fire/police bank.

UHF – Sub-bank 3 of the fire/police bank.

10 M – Sub-bank 1 of the HAM bank.

6 M – Sub-bank 2 of the HAM bank.

2 M – Sub-bank 3 of the HAM bank.

70CM – Sub-bank 4 of the HAM bank.

KEYPAD

Understanding the Keypad



MAR – Search the preprogrammed marine bank.

FD/PD – Search the preprogrammed fire/police bank.

 – Search the preprogrammed weather bank, or press and hold to jump to the Skywarn channel. You must first program your local Skywarn frequency into channel 200 (see page 22).

HAM – Search the preprogrammed amateur radio bank.

AIR – Search the preprogrammed aircraft bank.

FM – Search FM radio stations.


SCAN / MAN (Manual) – Enter Scan mode to scan programmed channels. Enter Manual mode to stop scanning, directly enter a channel number, or monitor a single channel.

  – Select the direction for searching and scanning.

PRI / ALERT – Enable and disable the priority feature. Enable and disable SAME standby mode when monitoring a weather channel.

PSE (Pause) – Stop and restart a search or tune.

KEYPAD

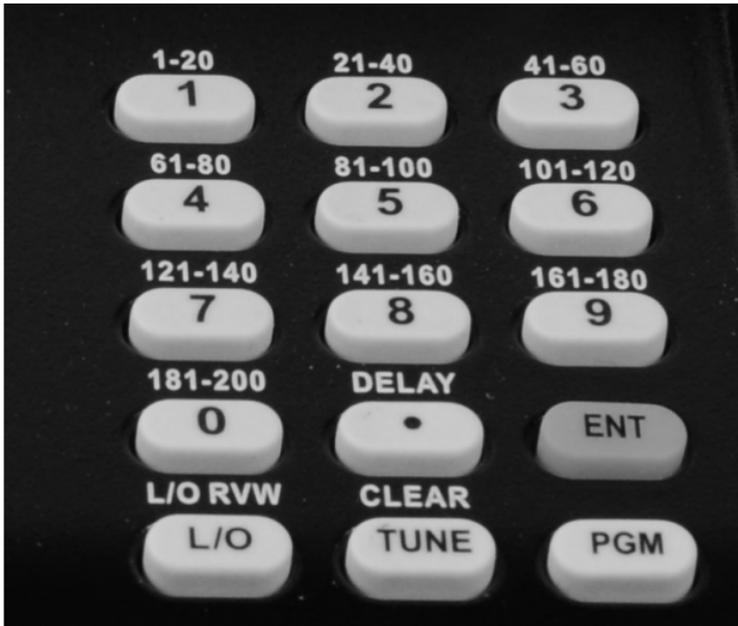

0-9 – Input numbers when entering frequencies and selecting banks (0 selects bank 10). The number range above the keys (1-20, 21-40, 41-60, etc.) indicates the channels stored in that bank.

• / DELAY – Input a decimal point when entering frequencies. Set a two-second delay for a selected channel.

ENT (Enter) – Complete the entry of a frequency.

L/O / L/O RVW – Lock-out selected channels or frequencies. Review locked-out frequencies.

TUNE / CLEAR – Enter Tune search. Clear an incorrect entry.

PGM – Program frequencies into channels.

Configuring Your Scanner

Preprogrammed Frequencies

Your scanner includes 153 preprogrammed frequencies, which you can load into Channels 1 to 153. For a list of these frequencies, see “Preprogrammed Frequency List” on page 23.

To load the preprogrammed frequencies:

1. Turn off the scanner and then turn it on again.
2. While *WELCOME* message appears, press **PGM**.
3. *Load -Fr-* appears, then *YES--Ent* and *No--CLEAR* appear alternately.
4. Press **ENT** to load frequencies or **CLEAR** to cancel.

Programming Channels

If you do not have a list of frequencies in your area, refer to www.radioreference.com.

1. Press **PGM**. *PGM* appears.
2. Enter the channel number (1–200) where you want to store a frequency, then press **PGM** again.
3. Use the number keys and **•** to enter the frequency (including the decimal point), then press **ENT**.
4. To program the next channel in sequence, press **PGM** and repeat Step 3. To program a specific channel repeat Steps 2 and 3..
 - Your scanner automatically rounds down to the closest valid frequency. For example, if you enter 151.473, your scanner rounds it to 151.470.
 - If *Error* appears and the scanner beeps three times when you press **ENT**, start again from Step 2.
 - If the frequency is already stored in another channel, the scanner beeps three times and displays *•DUPL•* (duplicate) and the lowest channel number where the frequency is already stored. Press **TUNE/CLEAR** to cancel. Press **ENT** if you still want to store the frequency.

PROGRAMMING

Programming with a Computer

You can upload or download programmed data to or from a PC using a PC/IF cable.

The application software is available online at www.PSRedit.com or www.Starrsoft.com. Find model WS1025 and follow instructions in the software package to upload and download data.

Cloning Programmed Data

You can transfer the programmed data to and from a WS1025 scanner using an optional connecting cable with 1/8-inch (3.5mm) stereo phone plugs on both ends.

1. Turn on both scanners.
2. Connect the connecting cable to each scanner's **PC/IF** jack. *CLONe* and *UP to SEnd* appears.
3. Press **▲** on the host scanner.
4. *SEndInG* appears at the host scanner.

To exit clone mode after the data transfer is complete, remove the cable.

No ConnEct appears if you try to connect to another model scanner. The WS1025 does not clone with other scanner models.

Searching for Frequencies

During a tune search, the scanner tunes up or down starting from a frequency you specify.

1. Press **TUNE**. The display alternates between *PSE* and *-t-*.
2. If you want to change the starting frequency, enter a new frequency and press **ENT**.
3. Press **PSE** to start tune search. *-t-* appears on the display.

SERVICE SEARCH

Service Bank Search

Your scanner contains groups of preset frequencies called Service Banks. You can search for marine, fire/police, aircraft, ham, FM, and weather transmissions even if you do not know the specific frequencies that are used in your area.

Then you can store the frequencies you find into the scanner's channels (except for weather and marine banks, which are already stored as channels). To start a search, press the button of the Service Bank you would like to search (Marine, Fire/Police, Aircraft, Ham, FM, or Weather).

Storing Found Frequencies

Once you find interesting frequencies during a Tune or Service Bank search, you can store them in the scanner's channel-storage banks.

1. Press **ENT** when you find a frequency. The bank number and *StorE* appear.
 2. To change banks, enter the new bank number.
 3. Press **ENT** to store the frequency. The channel and frequency flash twice. To cancel the operation, press **TUNE/CLEAR**.
- The frequency is automatically stored in the first empty channel of the selected bank.

Search Commands

- Press **PSE** to pause searching. Press **PSE** again to resume.
- Press **•/Delay** to turn the two-second delay feature on and off.
- Press **L/O** to lock-out a frequency (except Weather band).
- To reverse the search direction at any time, press **▲** or **▼**.
- If necessary, you can select search groups using the number keys.

SCANNING STORED CHANNELS

- If the scanner displays *-dUPL-*, the frequency is already stored in another channel. Press **ENT** if you want to continue storing the frequency. Press **TUNE/CLEAR** to cancel.
- If there are no empty channels in the bank, *Ch-FULL* appears. You can select another bank or clear some channels in the current bank (see "**Clearing a Stored Channel**" on page 18).
- If the scanner displays *-dUPL-* or *CH-FULL*, you can store another channel location by pressing **PGM**. The channel number flashes and *000.0000* (or previous frequency) appears. Press the desired channel number then press **ENT**. Repeat if needed. Press **ENT** again when an empty channel is found.

Scanning Stored Channels

Press **SCAN/MAN** until *SCAN* appears to continuously scan through all channels with stored frequencies.

If the scanner finds an active frequency, it stops and displays that channel and frequency number, then it automatically begins scanning again when the transmission on that frequency ends.

- Press **▲** or **▼** to reverse the scanning direction.
- To monitor a channel, press **SCAN/MAN** at any time during the transmission so *MAN* appears.

The scanner does not scan channels in banks that are turned off.

Birdie Frequencies

All scanners have birdie frequencies, which are signals created inside a scanner that can cause interference.

To find the birdies in your scanner:

1. Disconnect the antenna, and make sure that no other nearby radio or TV sets are turned on near the scanner.
2. Search every frequency range from its lowest frequency to the highest. Occasionally, the searching will stop as if it has found a signal, often without any sound. This is a birdie.
3. Make a list of all the birdies in your scanner for future reference.

PRIORITY CHANNEL

To turn a channel-storage bank on or off, press the bank's number key (**1-0**, using **0** for bank 10) during scanning. The channel-storage banks are on when they have a bar underneath them and off when no bar appears underneath them.

- You cannot turn off all banks; there must be at least one active bank.
- You can manually select any channel in a bank, even if the bank is turned off.

Setting Delay

To avoid missing a reply in conversations, a two-second delay is automatically set for each channel. The scanner stops for two seconds after a transmission ends before it resumes scanning or searching. *DLY* appears on the display when the delay function is active.

To turn delay on:

- If the scanner is scanning and stops on an active channel, quickly press **•/DELAY** before it resumes.
- If the desired channel is not selected, manually select the channel, then press **•/DELAY**.
- If the scanner is searching, press **•/DELAY**. *DLY* appears and the scanner adds a two-second delay to every transmission it stops on in that bank.

To turn delay off:

Press **•/DELAY** while the scanner is monitoring a channel or frequency. *DLY* disappears.

Using the Priority Channel

The priority feature sets the scanner to check one specific channel every two seconds while scanning. You can only program one frequency into the priority channel.

1. Press **PGM**, then press **PRI/ALERT**. *PCH* and *000.0000* (or the previously stored frequency) appear.
2. Enter the frequency you want stored in the priority channel, then press **ENT**.

MONITORING CHANNEL

3. To turn on the priority feature, press **PRI/ALERT** during scanning or searching. *PRI* appears. The scanner checks the priority channel every two seconds and stays on the channel if there is activity. To turn off the priority feature, press **PRI/ALERT**. *PRI* disappears.

Monitoring a Channel

You can continuously monitor a specific channel without scanning.

1. Press **SCAN/MAN** until *MAN* appears.
2. Enter the channel number (1–200).
3. Press **SCAN/MAN** again.

Locking Out Channels

You can increase the scanning or search speed by locking out channels or frequencies that have a continuous transmission, such as control channels, weather channels, or birdie frequencies.

Press **L/O** when the scanner stops on a channel or frequency while scanning or searching. The scanner locks out the channel/frequency then continues scanning/searching.

To manually lock-out a channel, select the channel then press **L/O**. **L/O** appears in the display.

- Your scanner automatically locks out empty channels.
- You can still manually select locked-out channels.
- You can lock-out a maximum of 50 frequencies during a search. If you try to lock-out more, *L-O Fr-FULL* appears.

Managing Lock-outs

1. Set the scanner to Manual by pressing the **SCAN/MAN** button until *MAN* appears.
2. Hold down **L/O/L/O RVW** for about two seconds. The scanner pulls up a locked out channel.
3. Press and hold **L/O/L/O RVW** to show the next locked out channel. If an error beep sounds, there are no locked out channels.
4. To remove the lock-out, press **L/O/L/O RVW** until **L/O** disappears.

MANAGING SERVICE BANK

Managing Service Bank Lock-outs

1. Hold down **L/O/L/O RVW** for about two seconds during a Service Bank search.
2. Press **▲** or **▼** repeatedly to scroll through the list of locked-out frequencies. *L-r* and **L/O** appear in the display.
3. Press **L/O/L/O RVW** to remove the lock-out. The list scrolls to the next locked-out frequency.
 - When you reach the highest locked-out frequency, the scanner beeps twice and rolls to the lowest locked-out frequency.
 - If the Service Bank has no locked-out frequencies, *EMPTy* appears.

Unlocking All Service Bank Frequencies

1. Hold down **L/O/L/O RVW** for about two seconds during a Service Bank search. *L-r* appears.
2. While holding down **TUNE/CLEAR**, press **L/O/L/O RVW**. *FLo ALL-CL* appears for about two seconds. Then the display alternates with *YES ---Ent* and *no --CLEAR*.
3. Press **ENT**. *L-r EMPTy* appears. The scanner clears lock-outs from all frequencies in the Service Bank.

Clearing a Stored Channel

To remove a frequency stored in a channel.

1. Press **SCAN/MAN** to stop scanning.
2. Press the number keys to enter the channel number (1–200).
3. Press **PGM**. *PGM* appears.
4. Press **0** then **ENT**. The frequency number changes to *000.0000* to indicate the channel is cleared.
5. To clear another channel, use the number keys to enter that channel number then press **PGM** again. Or, repeatedly press **PGM** until the desired channel number appears. Repeat Step 4.

Weather Features

The NOAA and your local weather reporting agency broadcast local forecast and regional weather information on one or more channels allocated for use by weather reporting agencies.

Your scanner is an extremely sensitive high-quality receiver on the weather frequencies. However, the included antenna is optimized for general purpose scanning. To receive weather alerts, please make sure you are receiving a clear signal or switch to an external antenna.

Press **☞** to hear your local forecast and regional weather information. *WEAtHER* appears for about two seconds, then the scanner starts searching the weather bank.

Press **PSE** to stop searching the channels. *SRCH* disappears and *MAN* appears. To change the channel manually, press **▲** or **▼**.

Receiving All Weather Alerts

To program the scanner to search for weather alerts every two seconds, set a weather channel as the priority channel. See **“Using the Priority Channel”** on page 16.

If the scanner detects a 1050 Hz weather alert tone on the programmed channel, the scanner sounds the alert tone and *ALERT* flashes. Press any key to turn off the alarm.

Receiving Alerts for Specific Areas

The National Weather Service precedes each weather alert with a digitally encoded SAME (Specific Area Message Encoding) signal, then a 1050 Hz tone. The SAME signal includes a FIPS (Federal Information Processing Standard) code and an event code.

A current list of FIPS codes is located at www.NWS.NOAA.gov/NWR.

WEATHER

SAME Standby Mode

In SAME Standby mode, your scanner monitors weather channels for SAME alerts for up to seven areas you specify by entering the FIPS codes.

To program your scanner for SAME Standby mode:

1. Press .
2. Press **PGM** to access the FIPS code entry mode.
3. Use **▲** or **▼** to select the desired FIPS code storage location.
4. Use the number keys to enter the FIPS code, then press **ENT** to store the code.
5. Repeat steps 3-4 for all the FIPS codes that you wish to store.
6. Press  to exit FIPS code entry mode. The scanner displays *F* showing that FIPS codes are enabled.
7. Press **PRI/ALERT** to initiate SAME Standby mode. The scanner displays *F [1-7]CH StAndby*.

The scanner will monitor weather channels for alerts with matching FIPS codes. To exit SAME Standby mode, press **PRI/ALERT** again.

- Press **L/O** during step 4 to lock-out FIPS entries; **L/O** appears in the display. Press **L/O** again to enable FIPS entries; **L/O** disappears.
- If you do not enter any FIPS codes, or if your FIPS codes are locked out, when you enter SAME Standby mode the scanner receives alerts and warning messages for all receivable areas.
- The scanner sounds an alert when it receives the SAME code. To stop the alert and ready the scanner to receive a new alert signal, press any key.
- If you do not stop the alert within five minutes, the alert stops and the scanner beeps every ten seconds. If the scanner receives a new weather alert after five minutes, it sounds the new alert.

SKYWARN

Testing the Weather Alert and Beep Tone

1. To test the weather alert, press and hold **ENT** for more than 2 seconds while *F [1-7]CH StAndby* appears on the display.
The display indicates the type of message, and the scanner sounds an alert or series of beeps.
The beeps automatically change every 3 seconds.
2. Press any key to stop testing.

Skywarn™

Many areas of the country have amateur radio repeaters that have been designated as "Skywarn" repeaters. During times of severe weather, these repeaters relay reports of severe weather directly to the local National Weather Service forecast office. Your scanner can easily jump to your local Skywarn frequency and monitor these reports.

Before using this feature, you must program the Skywarn frequency into channel 200. Refer to www.radioreference.com to find Skywarn frequencies in your area.

To activate Skywarn, press and hold  for about two seconds. The scanner jumps to channel 200 to monitor the Skywarn frequency. If no frequency is programmed in the Skywarn channel, *No Prog* appears.

Additional Information

Care

Your scanner is not waterproof. Do not expose it to rain, moisture, or extremely high humidity. If the scanner gets wet, wipe it dry immediately. Use and store the scanner only in normal temperature environments. Handle the scanner carefully; do not drop it. Keep the scanner away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Initializing the Scanner

If the scanner's display locks up or does not work properly after you connect a power source, you might need to initialize the scanner.

Important: This procedure clears all information you stored in the scanner's memory. Only initialize the scanner when you are sure the scanner is not working properly.

Important: Do not turn off the scanner until the initialization is complete. When the initialization is complete, *1CH 000.0000* appears on the display.

1. Turn off the scanner, then turn it on again. *WELCOME SCANNING RECEIVER* appears.
2. Press **0**, then press **1** while the welcome message is on the screen. *INITIAL* appears for about two seconds, then *YES —Ent* and *No —CLEAR* appear alternately.
3. Press **ENT**. *WAIT* appears for about two seconds.

PREPROGRAMMED FREQUENCY LIST

Preprogrammed Frequency List

| BANK 1 | | BANK 2 | | BANK 3 | |
|--------|-------------|--------|-------------|--------|-------------|
| Ch. | Freq. (MHz) | Ch. | Freq. (MHz) | Ch. | Freq. (MHz) |
| 1 | 40.5000 | 21 | 151.6250 | 41 | 154.3250 |
| 2 | 52.5250 | 22 | 151.8200 | 42 | 154.3400 |
| 3 | 121.5000 | 23 | 151.8800 | 43 | 154.3550 |
| 4 | 122.0000 | 24 | 151.9400 | 44 | 154.3700 |
| 5 | 122.2000 | 25 | 151.9550 | 45 | 154.3850 |
| 6 | 122.7000 | 26 | 154.0100 | 46 | 154.4000 |
| 7 | 122.7500 | 27 | 154.0700 | 47 | 154.4150 |
| 8 | 122.8000 | 28 | 154.1300 | 48 | 154.4300 |
| 9 | 122.9000 | 29 | 154.1450 | 49 | 154.4450 |
| 10 | 122.9500 | 30 | 154.1600 | 50 | 154.5700 |
| 11 | 123.0000 | 31 | 154.1750 | 51 | 154.6000 |
| 12 | 123.1000 | 32 | 154.1900 | 52 | 155.1600 |
| 13 | 123.4500 | 33 | 154.2050 | 53 | 155.1750 |
| 14 | 131.4500 | 34 | 154.2200 | 54 | 155.2050 |
| 15 | 131.6750 | 35 | 154.2350 | 55 | 155.2200 |
| 16 | 146.5200 | 36 | 154.2500 | 56 | 155.2350 |
| 17 | 146.7600 | 37 | 154.2650 | 57 | 155.2650 |
| 18 | 146.8800 | 38 | 154.2800 | 58 | 155.2800 |
| 19 | 146.9400 | 39 | 154.2950 | 59 | 155.2950 |
| 20 | 148.1500 | 40 | 154.3100 | 60 | 155.3250 |

PREPROGRAMMED FREQUENCY LIST

| BANK 4 | | BANK 5 | | BANK 6 | |
|--------|-------------|--------|-------------|--------|-------------|
| Ch. | Freq. (MHz) | Ch. | Freq. (MHz) | Ch. | Freq. (MHz) |
| 61 | 155.3400 | 81 | 415.7000 | 101 | 460.4250 |
| 62 | 155.3550 | 82 | 446.0000 | 102 | 460.4500 |
| 63 | 155.3700 | 83 | 450.8000 | 103 | 460.4750 |
| 64 | 155.3850 | 84 | 454.0000 | 104 | 460.5000 |
| 65 | 155.4000 | 85 | 460.0250 | 105 | 460.5250 |
| 66 | 155.4750 | 86 | 460.0500 | 106 | 460.5500 |
| 67 | 156.4250 | 87 | 460.0750 | 107 | 460.5750 |
| 68 | 156.4500 | 88 | 460.1000 | 108 | 460.6000 |
| 69 | 156.4750 | 89 | 460.1250 | 109 | 460.6250 |
| 70 | 156.5750 | 90 | 460.1500 | 110 | 460.6500 |
| 71 | 156.6250 | 91 | 460.1750 | 111 | 460.7000 |
| 72 | 156.8000 | 92 | 460.2000 | 112 | 460.7500 |
| 73 | 156.9250 | 93 | 460.2250 | 113 | 460.8000 |
| 74 | 157.0500 | 94 | 460.2500 | 114 | 460.8500 |
| 75 | 157.1000 | 95 | 460.2750 | 115 | 460.9000 |
| 76 | 157.1250 | 96 | 460.3000 | 116 | 460.9250 |
| 77 | 157.4250 | 97 | 460.3250 | 117 | 460.9500 |
| 78 | 162.3000 | 98 | 460.3500 | 118 | 460.9750 |
| 79 | 163.2000 | 99 | 460.3750 | 119 | 462.5500 |
| 80 | 415.2000 | 100 | 460.4000 | 120 | 462.5625 |

PREPROGRAMMED FREQUENCY LIST

| BANK 7 | | | | BANK 8 | |
|--------|-------------|-----|-------------|--------|-------------|
| Ch. | Freq. (MHz) | Ch. | Freq. (MHz) | Ch. | Freq. (MHz) |
| 121 | 462.5750 | 134 | 462.9500 | 141 | 467.5875 |
| 122 | 462.5875 | 135 | 462.9750 | 142 | 467.6125 |
| 123 | 462.6000 | 136 | 464.5000 | 143 | 467.6375 |
| 124 | 462.6125 | 137 | 464.5500 | 144 | 467.6625 |
| 125 | 462.6250 | 138 | 464.8750 | 145 | 467.6875 |
| 126 | 462.6375 | 139 | 467.0625 | 146 | 467.7125 |
| 127 | 462.6500 | 140 | 467.5625 | 147 | 467.7625 |
| 128 | 462.6625 | | | 148 | 467.8125 |
| 129 | 462.6750 | | | 149 | 467.8500 |
| 130 | 462.6875 | | | 150 | 467.8750 |
| 131 | 462.7000 | | | 151 | 467.9000 |
| 132 | 462.7125 | | | 152 | 469.5000 |
| 133 | 462.7250 | | | 153 | 469.5500 |

SERVICE BANKS

Service Banks

The scanner is preprogrammed with the frequencies allocated to marine, fire/police, aircraft, ham radio, FM broadcast and weather services. This is handy for quickly finding active frequencies instead of searching through an entire bank (see "Service Bank Search" on page 14).

NOTE: The frequencies in the scanner's one-touch service bands are preset. You cannot change them.

Fire/Police

| GROUP 1 | | GROUP 2 | | GROUP 3 | |
|------------------------|------------|------------------------|------------|------------------------|------------|
| Frequency Range (MHz). | Step (kHz) | Frequency Range (MHz). | Step (kHz) | Frequency Range (MHz). | Step (kHz) |
| 33.420-33.980 | 20 | 153.770-154.130 | 60 | 453.0375-453.9625 | 12.5 |
| 37.020-37.420 | 20 | 154.145-154.445 | 15 | 458.0375-458.9625 | 12.5 |
| 39.020-39.980 | 20 | 154.650-154.950 | 15 | 460.0125-460.6375 | 12.5 |
| 42.020-42.940 | 20 | 155.010-155.370 | 60 | 465.0125-465.6375 | 12.5 |
| 44.620-45.860 | 40 | 155.415-155.700 | 15 | | |
| 45.880 | - | 155.730-156.210 | 60 | | |
| 45.900-46.060 | 40 | 158.730-159.210 | 60 | | |
| 46.080-46.500 | 20 | 166.250 | - | | |
| | | 170.150 | - | | |

Aircraft

| GROUP 1 | | GROUP 2 | |
|------------------------|------------|------------------------|------------|
| Frequency Range (MHz). | Step (kHz) | Frequency Range (MHz). | Step (kHz) |
| 108.000-118.000 | 8.33 | 118.00833-136.99166 | 8.33 |

SERVICE BANKS

Ham Amateur Radio

| Group | Frequency Range (MHz) | Step (kHz) |
|-------|-----------------------|------------|
| 1 | 29.000-29.700 | 5 |
| 2 | 50.000-54.000 | 5 |
| 3 | 144.000-148.000 | 5 |
| 4 | 420.000-450.000 | 12.5 |

FM Broadcast

| Frequency Range (MHz) | Step (kHz) |
|-----------------------|------------|
| 87.3-107.9 | 100 |

Weather Channels

| Channel | Frequency (MHz) |
|---------|-----------------|
| 1 | 162.400 |
| 2 | 162.425 |
| 3 | 162.450 |
| 4 | 162.475 |
| 5 | 162.500 |
| 6 | 162.525 |
| 7 | 162.550 |

SERVICE BANKS

Marine

| Ch. | Frequency (MHz) | Ch. | Frequency (MHz) |
|-----|---------------------|-----|---------------------|
| 01 | 156.0500 | 63 | 156.1750 |
| 05 | 156.2500 | 64 | 156.2250 / 160.8250 |
| 06 | 156.3000 | 65 | 156.2750 |
| 07 | 156.3500 | 66 | 156.3250 |
| 08 | 156.4000 | 67 | 156.3750 |
| 09 | 156.4500 | 68 | 156.4250 |
| 10 | 156.5000 | 69 | 156.4750 |
| 11 | 156.5500 | 70 | 156.5250 |
| 12 | 156.6000 | 71 | 156.5750 |
| 13 | 156.6500 | 72 | 156.6250 |
| 14 | 156.7000 | 73 | 156.6750 |
| 15 | 156.7500 | 74 | 156.7250 |
| 16 | 156.8000 | 77 | 156.8750 |
| 17 | 156.8500 | 78 | 156.9250 |
| 18 | 156.9000 | 79 | 156.9750 |
| 19 | 156.9500 | 80 | 157.0250 |
| 20 | 157.0000 / 161.6000 | 81 | 157.0750 |
| 21 | 157.0500 | 82 | 157.1250 |
| 22 | 157.1000 | 83 | 157.1750 |
| 23 | 157.1500 | 84 | 157.2250 / 161.8250 |
| 24 | 157.2000 / 161.8000 | 85 | 157.2750 / 161.8750 |
| 25 | 157.2500 / 161.8500 | 86 | 157.3250 / 161.9250 |
| 26 | 157.3000 / 161.9000 | 87 | 157.3750 / 161.9750 |
| 27 | 157.3500 / 161.9500 | 88 | 157.4250 |
| 28 | 157.4000 / 162.0000 | | |

Note: Both frequencies (transmission and reception) are shown for marine channels used for duplex transmission.

SPECIFICATIONS

Specifications

Frequency Coverage

| | |
|-----------------------|---------------------|
| 29-54 MHz | (5 kHz steps)/FM |
| 87.3-107.9 MHz | (100 kHz steps)/WFM |
| 108-136.99166 MHz | (8.33 kHz steps)/AM |
| 137-143.9875 MHz | (12.5 kHz steps)/FM |
| 144-148 MHz | (5 kHz steps)/FM |
| 148.0125-150.7875 MHz | (12.5 kHz steps)/FM |
| 150.8-161.995 MHz | (5 kHz steps)/FM |
| 162-174 MHz | (12.5 kHz steps)/FM |
| 380-512 MHz | (12.5 kHz steps)/FM |

Sensitivity (S+N)/N 20 dB

| | |
|----------------------------------|-------------|
| 29-54 MHz | 0.5 μ V |
| 87.3-107.9 MHz ((S+N)/N 30 dB) | 1.0 μ V |
| 108-136.99166 MHz | 1.0 μ V |
| 137-174 MHz | 0.5 μ V |
| 380-512 MHz | 0.7 μ V |
| Spurious Rejection (FM @154 MHz) | 50 dB |

Selectivity

| | |
|-----------------------------------|-----------------------|
| ± 8 kHz/ ± 17 kHz (FM/AM) | -6dB/-50dB |
| ± 80 kHz/ ± 180 kHz (WFM) | -6dB/-50dB |
| Search Speed | Up to 80 Steps/Sec |
| Scan Speed | Up to 40 Channels/Sec |
| Delay Time | 2 Seconds |

IF Frequencies

| | |
|----------------------------------|------------------|
| 1st IF | 10.7 MHz |
| 2nd IF | 455 kHz |
| IF Interference Ratio (10.7 MHz) | 70 dB at 154 MHz |

Squelch Sensitivity

| | |
|------------------------------|------------------------------|
| Threshold (FM/AM) | Less than 0.5 μ V |
| Threshold (WFM) | Less than 1.0 μ V |
| Tight (FM) | (S + N)/N 25 dB |
| Tight (WFM) | (S+N)/N 60 dB |
| Tight (AM) | (S+N)/N 20 dB |
| Antenna Impedance | 50 Ohms |
| Audio Output Power (10% THD) | 0.7 W Nominal |
| Built-In Speaker | 3 Inches (77 mm), 8 Ohms |
| Operating Temperature | 32° to 110°F (0° to 43°C) |
| Power Requirements | 9V AC Adapter (supplied) |
| | 9V DC Adapter (not supplied) |
| Dimensions (HWD) | 8.25 x 6.87 x 2.37 In |
| | (210 x 175 x 60 mm) |
| Weight (without antenna) | 24.7 oz (700 g) |

Specifications and depictions are subject to change and improvement without notice. Actual product may vary from the images found in this document.

FCC INFORMATION

FCC Notice

This equipment has been tested and found to comply with the limits for a scanning receiver, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARRANTY

Consumer Warranty

This Whistler product is warranted to the original purchaser for a period of one (1) year from the date of original purchase against all defects in materials and workmanship, when purchased from an authorized Whistler retailer. **This limited warranty is void if the unit is abused, misused, modified, installed improperly, or if the housing and/or serial numbers have been removed.**

There are no express warranties covering this product other than those set forth in this warranty. All express or implied warranties for this product are limited to one (1) year. *Whistler is not liable for damages arising from the use, misuse, or operation of this product including but not limited to loss of time, inconvenience, loss of use of your product or property damage caused by your product or its failure to work, or any other incidental or consequential damages including personal injury.*

DO NOT RETURN ITEM TO STORE WHERE PURCHASED.
**FOR WARRANTY INFORMATION, CONTACT WHISTLER
CUSTOMER SERVICE AT 1-866-923-8719.**

Representatives are available to answer your questions
Monday – Friday
from 8:00 a.m. to 5:00 p.m. CT

Service Under Warranty

During the warranty period, defective units will be repaired or replaced (with the same or a comparable model), at Whistler's option, without charge to the purchaser when returned prepaid, with dated proof of purchase to the address below. Units returned without dated proof of purchase will be considered out of warranty and therefore are not covered by the described Limited Warranty. (Refer to Service Out of Warranty section.)

Due to the specialized equipment necessary for testing Whistler products, there are no authorized service centers other than Whistler. When returning a unit for service under warranty, please follow these instructions:

1. Ship the unit in the original carton or in a suitable sturdy equivalent, fully insured, with return receipt requested to:

Whistler Repair Dept.
1412 South 1st St.
Rogers, AR. 72756

Please allow 3 weeks turnaround time.

WARRANTY

IMPORTANT: Whistler will not assume responsibility for loss or damage incurred in shipping. Therefore, please ship your unit insured with return receipt requested.

CODs will not be accepted!

2. Include with your unit the following information, clearly printed:

- Your name and physical street address for shipping (no PO Boxes), a daytime telephone number, and an email address (if applicable).
- A detailed description of the problem (e.g., "device will not Power ON").
- A copy of your dated proof of purchase or bill of sale.

3. Be certain your unit is returned with its serial number. Units without serial numbers are not covered under warranty.

IMPORTANT: To validate that your unit is within the warranty period, make sure you keep a copy of your dated proof of purchase. For warranty verification purposes, a copy of your dated store receipt must accompany any Whistler product sent in for warranty work.

Service Out Of Warranty

Units will be repaired at "out of warranty" service rates when:

- The unit's original warranty has expired.
- A dated proof of purchase is not supplied.
- The unit has been returned without its serial number.
- The unit has been misused, abused, modified, installed improperly, or had its housing removed.

The minimum out of warranty service fee for your Whistler Scanner is \$50.00 (U.S.). If you require out of warranty service, please return your unit as outlined in the section "Service Under Warranty" along with a cashier's check or money order in the amount of \$50.00. Payment may also be made by MasterCard, VISA or American Express.

Personal checks are not accepted.

WARRANTY

In the event repairs cannot be covered by the minimum service fee, you will be contacted by a Whistler technical service specialist who will outline options available to you.

IMPORTANT: When returning your unit for service, be certain to include a daytime telephone number and an email address (if applicable).

Customer Service

If you have questions concerning the operation of your Whistler product, or require service during or after the warranty period, please call Customer Service at **1-866-923-8719**.

Representatives are available to answer your questions Monday - Friday from 8:00 a.m. to 5:00 p.m. (CT) or visit the F.A.Q.'s at www.whistlergroup.com.

CORPORATE HEADQUARTERS

1716 SW Commerce Dr. Ste. 8

PO Box 1760

Bentonville, AR 72712

Toll Free (800) 531-0004

TEL (479) 273-6012

FX (479) 273-2927

www.whistlergroup.com

CUSTOMER RETURN CENTER

1412 South 1st St.

Rogers, AR 72756

Customer Service Tel (866) 923-8719

Email: info@whistlergroup.com

P/N 581001a

05A14 © 2014 The Whistler Group, Inc.