

danita®


USER'S MANUAL

HP250


PROFESSIONAL FM TRANSCEIVER

PMR446
0.5W


Supplied Accessories

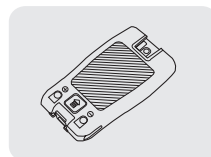

Li-ion battery

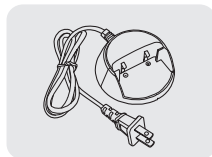


Charger

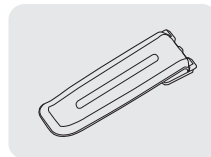



Belt clip

GETTING FAMILIAR

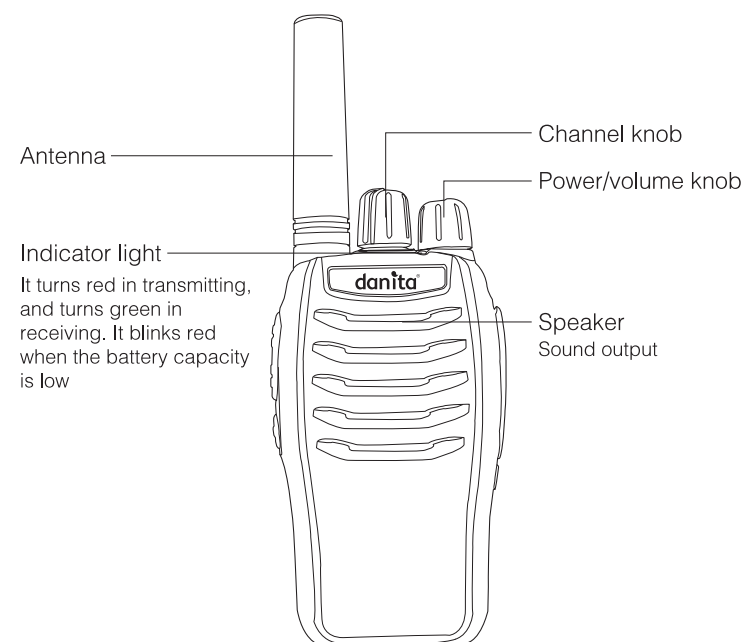

DECLARATION OF IDENTICAL PRODUCT

TYT Electronics Co., Ltd. hereby duly declares that transceiver, brand TYT, TC-666 is exactly the identical product(in design, circuit, technical parameters, size, tec...) of the model Danita HP250, which is also produced by us, the only difference between these two models is brand and model number because of commercial reason of Midtkom ApS.

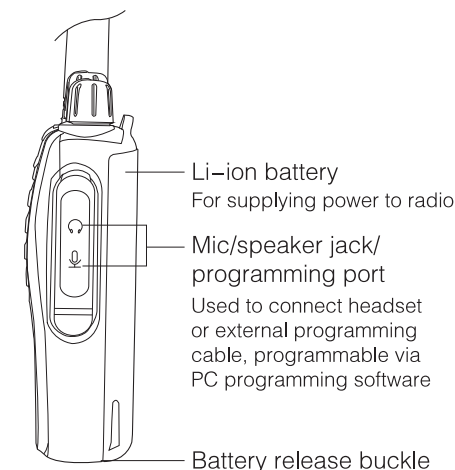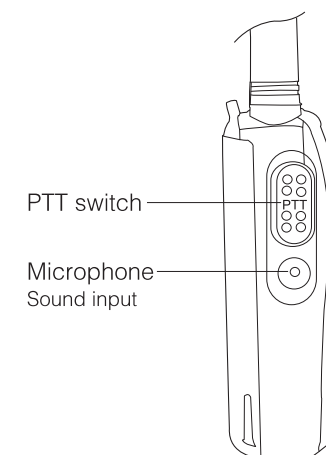

BASIC OPERATION

1. Indicator

Indicator turns red when transmitting, and it turns green when receiving

2. Channel Knob

Rotate the knob to select the channel 1 to channel 16, counterclockwise rotate to decrease the value of channel name, clockwise rotate to increase the value of channel name

3. Power Knob/Volume Knob

Clockwise rotate to turn on the radio, and counterclockwise rotate to turn off the radio. Rotate the knob can adjust the volume.

4. PTT switch

Press PTT switch and then talk to the microphone, the indicator light turns red, if the channel does not have transmitting frequency, a "DU DU" tone sounds, and indicator light turns red.

Release PTT switch to receive, it lights green when there is signal.

5. Squelch level

The squelch level will determine the signal strength to open the speaker of the radio. If the squelch level is lower, the background noise of opening the radios speaker the radios speaker will be higher, and the corresponding communication range will be further, but the anti-interference capacity will be weaker. The default setting of squelch level is 5, you can adjust it through the menu "Squelch level" of the "Optional Features" in the programming software. Level 0 to 9 can be selected. 0 is the lowest level.

6. Monitor

Press the squelch button to monitor different DCS calls at the same frequency, or press to press the button to listen when the signal strength does not reach the threshold.

7. TOT

The purpose of TOT is to prevent any radio from talking in one channel for a long time, and to prevent the transceiver from being damaged because of continuous transmission. If the transmitting time exceeds the TOT pre-set time, the radio will sounds "DU" and stops transmit, release the "PTT" key to back to receive status and stop sound "DU"

8. Scan

When the current channel is channel 16, the radio will automatically detect the 16 channels which defined as scan. When the channel which is scanned has signal, the radio will stop in the channel to communication
Notice:

A. When the scannable channels is less than 2 channels, radio can't go to scan

B. When the radio is stopping in the channel which has signal, after the signal disappears 10s, the radio will scans the next channel

C. If radio do not want to scan, please choose the "No" in the "Scan Add" for every channel

9. English voice prompt

The voice prompt can be selected "English/None" through the programming software.

10. Battery save function

This function can be set by the software

Turn on this function can make the standby time more longer.

11. Low battery alert

Notice:

when the voltage is lower than a certain level, if the voice selection is turned off, the sound of "DuDu" will appear every 15 seconds. If the voice is on, it will prompt "please charge." If the voice choice of Chinese or English, press PTT key or Vox transmission is invalid and the sound of "please charge" will still prompt, at the same time, the sound "Di" will ring until PTT release or Vox end.

12. Busy channel lock

If the busy lock is set, press PTT after receiving the signal to prohibit transmission and sound "Di" is ringing until PTT release.

13. Wide/narrow bandwidth select

The default is wide band, you can select the wide band or narrow band through the programming software

14. VOX

Speak to the microphone in normal voice to transmit, no need to press PTT key, turn VOX on/off through the software.

A: when VOX is on in your working channel.

Speak to the microphone directly, it will transmits automatically.

The radio stops transmitting when there is no voice, and waits for receiving

B. When a headset with a microphone is used

When VOX is on, you should VOX gain for the radio to identify voice volume. If the microphone is too sensitive, the noise around radio will start transmitting

If the microphone is not sensitive, the radio can not collect your voice, please adjust VOX level well to guarantee smooth communications.

15. Scrambler

We can use programming software to turn on or off the function of scrambler. Scrambling is one of the methods of information encryption. Scrambler is achieved through cepstrum to complete the goal of change of transportation spectrum. After receiving and releasing the signal, it is restored to achieve the effect of secrecy. Each channel can select the scramble solely.

16. CTCSS/DCS

You can set the CTCSSQT / DCSDQT via programming software. After setting the CTCSS or DCS, the squelch can only be turned on when the channel receiving the same CTCSS or DCS. If the same channel uses different QT / DQT for calling, the squelch cannot be turned on, the lights in green.

17. Programming protect

Enter the programming software interface, password box will appear (password default is empty), Tick the new password, the new password will be changed from the original gray into white editable state, fill in the password and click, password set successfully.

18. Special signal

This function occurs when there is DCS on the current channel, the purpose is to make the radio under the same group of DCS unable to hear the call content, to achieve the function of encryption.

SPECIFICATIONS

GENERAL

Frequency Range: PMR446
Channel No.: 16
Operating Voltage: 3.7V DC
Working Temperature: -10°C~+50°C
Antenna: high gain antenna
Antenna Impedance: 50 Ω
Mode of Operating: Simplex
Charging Current: 500mA
Dimension: 158x57x33mm
Battery capacity: 1200mAh

TRANSMITTER

Frequency Range: PMR446
RF Power: 0.5W
Modulation Type: 16KF 3E
Spurious Component: ≤7.5 μW
Modulation Noise: <-40dB
Modulation Distortion: <5%
Frequency Stability: 5ppm
Max Fr. Deviation: ≤ ± 5KHz
Current: ≤ 1200mA
Audio Response (300-3000Hz): +6.5~-14dB
Adjacent Channel power: ≥65dB
Modulation Sensitivity: 10 ± 2mv

RECEIVER

Frequency Range: PMR446
Receiving Sensitivity: ≤0.2 μV
Occupied Bandwidth: ≤16KHz
Adjacent Ch. Selectivity: ≥65dB
Intermodulation: ≥55dB
Audio Output Power: 1W
Audio Distortion: ≤5%
Frequency Stability: 5ppm
Transmission current: 150mAh
Receiving current: 55mAh
Standby current: 55mAh
Audio Response (300-3000Hz): +7~-12.5dB
Reference Frequency: 26.000MHz

Warranty card

Note:

1. This warranty card is only applicable to two-way radio of the above-listed model and serial number.
2. The warranty card is an important document for the end-user to enjoy warranty service, please keep it well.
3. This warranty card must be completed by the dealer and stamped with the sales stamp to take effect.

Customer's name: _____

Gender: _____

Add and postal code: _____

Customer's tel: _____

Model: _____

Serial number: _____

Purchasing date: _____

Purchasing date: _____

Invoice No.: _____

Dealer: _____

Stamp: _____

Add and ptal code of the dealer: _____

Contact tel: _____

Handling people: _____