

**SIMRAD**  
A KONGSBERG Company

MAXIMIZING YOUR PERFORMANCE AT SEA

M A N U A L

**Simrad HT50/HT5 I**  
**Axis 50 GMDSS**  
**Handheld VHF Radios**

© 2005 Simrad Ltd

The technical data, information, and illustrations contained in this publication were to the best of our knowledge correct at the time of going to print. We reserve the right to change specifications, equipment, installation, and maintenance instructions without notice as part of our policy of continual development and improvement.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form, electronic, or otherwise, without prior permission from Simrad Ltd. No liability can be accepted for any inaccuracies or omissions in the publication. Although every care has been taken to make it as complete and accurate as possible.

**1 GENERAL**

1.1 Introduction ..... 7

**2 OPERATION**

2.1 Controls ..... 8  
 2.2 Selecting secondary channel sets ..... 11  
 2.3 Disable/enable key beep ..... 12  
 2.4 Keypad lock ..... 12  
 2.5 Removing and attaching the battery ..... 12  
 2.6 Charger options ..... 13  
 2.7 Charging of batteries ..... 13  
 2.8 Battery level indicator ..... 13  
 2.9 HT51 accessory socket ..... 14

**3 APPENDIX**

3.1 Licensing ..... 15  
 3.2 Antenna ..... 16  
 3.3 Transmission range ..... 16  
 3.4 Channel frequencies ..... 17  
 3.5 Battery life guidelines ..... 18  
 3.6 Troubleshooting ..... 19  
 3.7 Spares & accessories ..... 20  
 3.8 Technical specification ..... 21  
 3.9 Declaration of Conformity ..... 22  
 3.10 Service & Warranty ..... 23





*HT50 waterproof  
handheld VHF*

# 1 GENERAL

## 1.1 Introduction

The Simrad waterproof handheld VHF range comprises three models:

- The **HT50** VHF radio is designed for leisure and light commercial use, and meets or exceeds stringent International Regulations EN301-178.
- The **HT51** model has all the features of the HT50, but includes an accessory socket for use with fistmikes, headsets, and other third party accessories.
- The **Axis 50** model for GMDSS convention vessels conforms to Pan European specification ETS300-225 for the use of radios for Safety at Sea.

All models are waterproof to IP67 standard.

Please note that regulations vary from country to country. Simrad sets are approved specifically by the countries in which they are sold. Consequently, there may be differences in the programming of sets bought in different countries and, therefore, in their associated manuals. If using the radio outside the country of purchase, it is vital to check that the set conforms to local regulations before use.

### **Thank you for choosing Simrad!**

If you are pleased with your radio, we hope you will be interested in our range of marine electronic equipment, which is manufactured to the same high standards as the HT50. Please contact your nearest Simrad Agent for a catalog showing our increasing range of high tech navigational instruments, autopilots, and VHF radio sets.

Simrad operate a policy of continual development and reserve the right to alter and improve the specification of their products without notice.

**Axis®** is a registered trademark of Simrad Ltd.

## 2 OPERATION

### 2.1 Controls

The location of the controls for the HT50 are shown in Fig 2.1.

**Functions:**

- 1 On / Off
- 2 High / Low power, Keypad lock
- 3 PTT (Push-To-Talk button)
- 4 Volume mode select
- 5 Squelch mode select
- 6 Up key
- 7 Down key
- 8 Scan mode
- 9 Dual Watch / Tri-Watch
- 10 Select Priority / Personal channel
- 11 Backlight On / Off & Light mode select

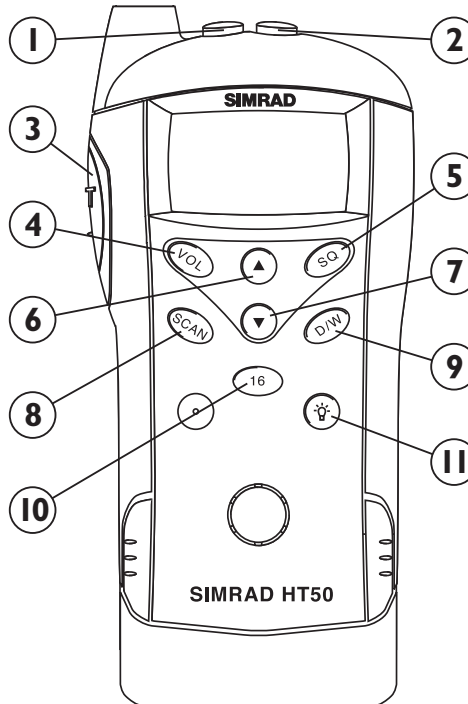


Fig 2.1 - HT50 controls

Pressing and holding certain keys will access additional functions. These are indicated by a double beep, or a triple beep if held for longer (Table 1).

Key	Press 1x	Press 2x	Press & hold <u>Double Beep</u>	Press & hold <u>Triple Beep</u>	Hold during Power Up
<b>VOL</b>	Select Volume mode				Select secondary channel set*
<b>SQ</b>	Select Squelch mode				Disable / enable first key beep
▲ ▼	<b>Standard mode</b> Channel Up / Down <b>Volume mode</b> Volume Up / Down <b>Squelch mode</b> Squelch Up / Down <b>Light mode</b> Light level Up / Down				
<b>SCAN</b>	Memory Scan	Add / delete channel from Memory Scan	Scan All Channels	Inhibit / enable selected channel from scan	
<b>D/W</b>	Dual Watch		Tri-Watch		
<b>16</b>	Select channel 16		Select Personal channel	Set Personal channel	
💡	Select Light mode Backlight On/Off				
<b>Hi/Lo</b>	Select 1 or 5 Watts		Engage / disable keypad lock		<i>*If available</i>

Table 1 - Additional functions, overview



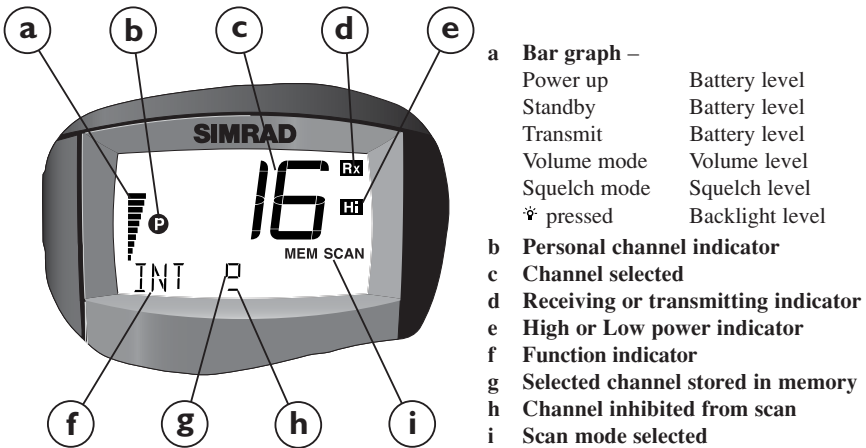


Fig 2.2 - HT50 display functions

### On/Off (1)

Press **⓪** to turn the HT50 on. To turn the radio off, press and hold the key for approximately 2 seconds. This is to avoid accidental power off.

### Hi/Lo (2)

Toggles between high and low transmit power (*see specification section 3.8*). Use the low setting over short ranges to preserve battery power.

### VOL – Volume (4) & SQ – Squelch (5)

Press to select Volume or Squelch mode then use the **▲** and **▼** keys to adjust the level.

The display shows “VOL” or “SQL” for 3 seconds – if **▲** or **▼** are not pressed within this time, their function reverts to channel select.



### ▲ / ▼ (6 & 7)

These keys will change the selected channel. Pressing **VOL**, **SQ**, or **☼**; then **▲/▼** within 3 seconds will adjust the volume, squelch, or backlighting level respectively. The bargraph will indicate the level selected.

### SCAN mode (8)

Scans through the channels stored in the channel memory (display shows “MEM SCAN”).


- Select channel and press twice to add to/delete from Memory Scan (display shows “ENT” or “DEL” respectively).

- The  icon indicates that the selected channel is included in Memory Scan.
- Press and hold until double beep sounds to scan all channels (display shows “SCAN”).
- Press and hold until triple beep sounds to inhibit/enable selected channel from scan (display shows “INH” or “ENA” respectively). The  icon indicates the channel is inhibited.

**D/W - Dual Watch & T/W – Tri-Watch (9)**

- Press to select Dual Watch of selected channel and Ch16 (the display shows “D/W”).
- Press and hold until double beep sounds for Tri-Watch – selected channel, personal channel, and channel 16 (the display shows “T/W”).

**16 - Channel 16 / Personal Channel (10)**

- Press to select channel 16.
- Press and hold until double beep to select personal channel (display shows ).
- Press and hold for three beeps to set selected channel as the personal channel.

** - Backlight (11)**





- Press to turn on and off. Use / to adjust the backlighting level (5 levels available). The bargraph indicates the backlighting level.
- The battery save function turns the backlighting off if no key is pressed after 20 seconds. Press any key (except  or ) to turn the light on again.



Fig 2.3 - Selecting alternative channel sets

**2.2 Selecting secondary channel sets**

In countries where it is permitted, holding VOL down while turning the radio on will enable the radio to operate on a secondary set of channels (Fig 2.3).

Where the display will normally show “INT” (International channel set) on the bottom line, this will show “USA” for USA channels, “CAN” for Canadian channels, etc.

- Channel sets available will depend on which country the radio is programmed for use in. *This function will only be available if permitted in the country of purchase (for details refer to sections 3.1 and 3.4).*
- The radio will revert to International channels if it is switched off, then on again.

## 2.3 Disable/enable key beep

The HT50 beeps every time a key is pressed to confirm operation. To disable the key beep, press and hold **SQ** while turning the set on. Repeat this procedure to turn the key beep on again.

Second level functions (such as All Channel Scan, Tri-Watch, etc.) will still be indicated by a beep, even if the key beep is disabled.

## 2.4 Keypad lock

The HT50 keypad can be locked to prevent accidentally pressing keys while in a pocket, etc.

To lock the keypad, press and hold the **Hi/Lo** key. The HT50 will beep twice and any key pressed will not function – “LOCK” will appear in the display. To disengage the keypad lock, press and hold **Hi/Lo** again.

**Note** *The PTT key will still function when the keypad lock is on, allowing transmitting and receiving as normal.*

**Note** *This function is not available with the Axis 50 GMDSS models (yellow case).*

## 2.5 Removing and attaching the battery

The HT50 is supplied with a 1200mAh NiMH battery (part no. **NH12**). The Axis 50 GMDSS radio has two battery options: an 850mAh NiCad (NC08) or a non-rechargeable Lithium battery (LTB3).

The batteries are supplied with a label across the contacts to prevent accidental discharge while in the box. This label should be removed before use.

To remove the battery, lift the two locking clips holding the battery pack in place (Fig 2.4). When reattaching, ensure the two locating pegs on the top of the battery are located into the slots in the radio and that the two locking clips have both engaged.

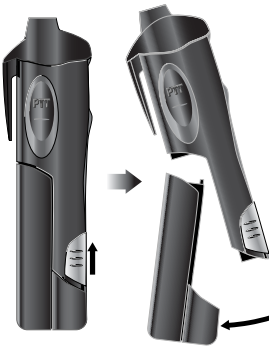


Fig 2.4 - Battery pack removal

The set is fully waterproof, even with the battery removed, but it is recommended that any moisture on the top of the battery or in the battery compartment is wiped clear before attaching, to prevent the water creating a conductive path between the contacts and reducing battery life.

**Note** *Axis 50 batteries cannot be used with an HT50, and vice versa.*

## 2.6 Charger options

The HT50 is supplied with a TC50 trickle charger that will accept the whole radio or the battery only. The TC50 runs from a 12.6V–15.5V DC supply or from AC mains with an appropriate adaptor/power supply. Charging with the trickle charger takes approximately 12–16 hours. There is also a rapid charger available (RC50) which will charge the battery within 1½ hours.

## 2.7 Charging of batteries



Fig 2.5 - Battery charger

To charge the NiCad and NiMH battery packs, insert the battery or radio into the charger ensuring that any moisture is wiped from the contacts on the back of the battery pack. The TC50 will trickle charge the battery to full capacity (Fig 2.5). The RC50 will rapid charge the battery until it is fully charged and will then automatically switch to maintenance charge.

- Note that batteries are supplied uncharged and must be fully charged before use.
- Fully charge the battery when not in use, though it may lose some of its charge after several months of storage.
- Do not charge at temperatures below 0°C or above 40°C.
- Turn off radio when charging the battery.
- Regularly discharge the battery totally – repeated recharging of the battery while it is only partly discharged may create a ‘memory effect’, preventing it reaching full charge.
- Dispose of used batteries carefully. The contents of the batteries could be harmful to the environment.
- Never expose to a naked flame.

### Caution

*The LTB3 Lithium battery is not rechargeable and **under no circumstances** should any attempt be made to recharge it. Replacement batteries can be ordered from your local Simrad Agent.*

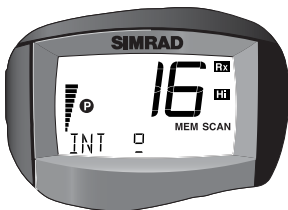


Fig 2.6 - Battery level indicator

## 2.8 Battery level indicator

Except when adjusting the Volume or Squelch level, the bar graph on the display shows the battery charge level (Fig 2.6). This indicates the voltage at the battery terminals, not necessarily the charge stored. Ten or nine bars indicate a fully charged battery, three or four bars mean the battery is almost drained.

A more accurate indication of the battery state will be obtained by transmitting briefly on high power. **Do not use Ch16 for this purpose.**

When using a lithium battery pack, the low-level battery indicator may flash under transmit conditions. This does not necessarily reflect the charge level remaining in the battery, as it is due to the different voltage characteristics of a Lithium battery pack under load.

## 2.9 HT51 accessory socket

The HT51 features an accessory socket (Fig 2.7) for use with fistmikes, headsets, and boom-mikes, etc. The features, functionality, and operation of the HT51 are identical to the HT50.

Only accessories made specifically for use with the HT51 should be connected – incompatible accessories could damage the radio and invalidate the warranty.

**Switch off the radio before connecting an accessory to the socket.**

Note that the HT51's internal speaker, microphone, and **PTT** button are disabled when the accessory is connected – these functions are transferred to the accessory.

For details of compatible accessories available, please contact your Simrad Distributor or the Simrad Preferred Supplier:



Fig 2.7 - HT51 with accessory socket

**Atlantic Instruments  
The Coach House  
Trefor  
Holyhead  
Anglesey LL65 1LZ  
United Kingdom**

**Contact:**

**Charles Mortlock**

**Mobile: +44 (0)7761 494384**

**Phone: +44 (0)1407 720513**

**Fax: +44 (0)1407 720616**

**E-mail: [charles@atlanticuk.com](mailto:charles@atlanticuk.com)**

**Website: [www.atlanticuk.com](http://www.atlanticuk.com)**

## 3 APPENDIX

### 3.1 Licensing

Note *Prior to use please check the national licensing requirements for operators.*

In the UK license applications and queries should be made to the following authority:

**Ship Radio Licencing  
Radio Licencing Centre  
The Post Office  
P.O. Box 1495  
Bristol BS99 3QS  
Website: [www.radiolicensingcentre.co.uk/rlc](http://www.radiolicensingcentre.co.uk/rlc)**

A set may only be operated by or under the supervision of the holder of a Marine Radio Operator's Certificate of Competence and Authority to Operate. This is awarded on completion of the Marine Short Range Certificate course administered by the Royal Yachting Association:

**Royal Yachting Association  
RYA House  
Ensign Way  
Hamble  
Southampton SO31 4YA  
Website: [www.rya.org.uk](http://www.rya.org.uk)  
Tel. 0845 345 0400**

Holders of the Restricted Certificate of Competence in Radio-telephony (which covers MF/HF SSB, etc.) do not need a separate VHF certificate.

In all other countries, please contact your regional authority for information.

#### **WARNING**

***North American Users – FCC\* regulations require that members of the general public should not be exposed to excessive levels of radio frequency radiation. To comply with the specified limits it is recommended that this radio is operated in such a manner as to limit transmission to no more than five minutes in any half hour period and that the antenna is kept at least 8 in (20 cm) from any part of the body during transmission.***

*\*Federal Communications Commission*

## 3.2 Antenna

The antenna for the radio is fitted to the unit via a robust screw fitting to an M6 threaded socket on the top of the radio. This system is more rugged than a traditional BNC connector, so the radio's drop-proof integrity is not compromised by the antenna fixing. While the radio is drop-proof and very robust, damage to the antenna such as bending or kinking may adversely affect the transmission efficiency of the unit, which may lead to overloading of the power module. Damaged antennas should be replaced immediately.

→ Replacement antennas can be obtained from authorized Simrad Agents. Please refer to section 3.7 for more details.

## 3.3 Transmission range

Because VHF signals travel in a straight line and are not reflected back off the ionosphere as lower frequency signals are, the range of VHF signals is limited to 'line of sight', beyond which the other vessel passes behind the curve of the Earth. Therefore, the range will increase greatly the higher above sea level the antenna is positioned, as Fig 3.1 illustrates (assuming maximum transmission power is used):

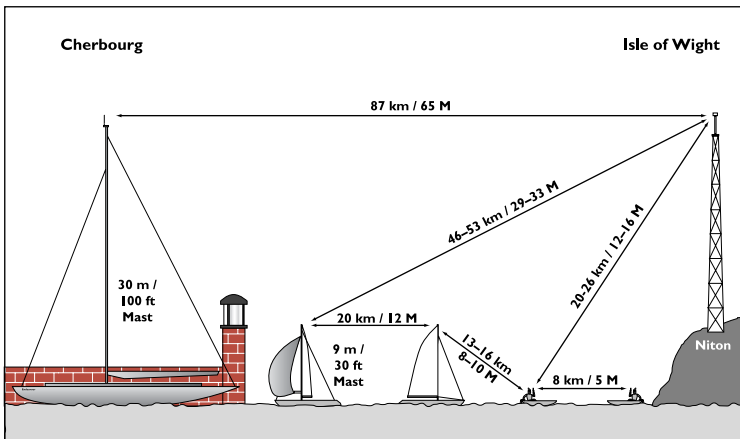


Fig 3.1 - Transmission ranges

The typical range of a handheld radio such as this one used at sea level will be approximately 8 km (5 miles). This will increase as height above sea level increases, or if the other radio user's antenna is at a greater height – note that the range between the yacht with the antenna mounted on a 9 m (30 ft) mast and the handheld user increases to 13–16 km (8–10 miles).

### 3.4 Channel frequencies

Channel Designators	Tx	INT Rx	USA Rx
0	156.000	156.000	156.000
60*	156.025	160.625	156.025
01	156.050	160.650	156.050
61	156.075	160.675	156.075
02*	156.100	160.700	156.100
62*	156.125	160.725	156.125
03	156.150	160.750	156.150
63	156.175	160.775	156.175
04*	156.200	160.800	156.200
64	156.225	160.825	156.225
05	156.250	160.850	156.250
65	156.275	160.875	156.275
06	156.300	156.300	156.300
66	156.325	160.925	156.325
07	156.350	160.950	156.350
67	156.375	156.375	156.375
08	156.400	156.400	156.400
68	156.425	156.425	156.425
09	156.450	156.450	156.450
69	156.475	156.475	156.475
10	156.500	156.500	156.500
70	156.525	156.525	156.525
11	156.550	156.550	156.550
71	156.575	156.575	156.575
12	156.600	156.600	156.600
72	156.625	156.625	156.625
13	156.650	156.650	156.650
73	156.675	156.675	156.675
14	156.700	156.700	156.700
74	156.725	156.725	156.725
15	156.750	156.750	156.750
75	156.775	156.775	156.775
16	156.800	156.800	156.800
76	156.825	156.825	156.825
17	156.850	156.850	156.850
77	156.875	156.875	156.875

Channel Designators	Tx	INT Rx	USA Rx
18	156.900	161.500	156.900
78	156.925	161.525	156.925
19	156.950	161.550	156.950
79	156.975	161.575	156.975
20	157.000	161.600	161.600
80	157.025	161.625	157.025
21	157.050	161.650	157.050
81	157.075	161.675	157.075
22	157.100	161.700	157.100
82	157.125	161.725	157.125
23	157.150	161.750	157.150
83	157.175	161.775	157.175
24	157.200	161.800	161.800
84	157.225	161.825	161.825
25	157.250	161.850	161.850
85	157.275	161.875	161.875
26	157.300	161.900	161.900
86	157.325	161.925	161.925
27	157.350	161.950	161.950
87	157.375	157.375	157.375
28	157.400	162.000	162.000
88	157.425	157.425	157.425
29	-	-	157.450
89	-	-	157.475
WX01	-	-	162.550
WX02	-	-	162.400
WX03	-	-	162.475
WX04	-	-	162.425
WX05	-	-	162.450
WX06	-	-	162.500
WX07	-	-	162.525
WX08	-	-	161.650
WX09	-	-	161.775
WX10	-	-	163.275

Note: Duplex channels are marked in grey.  
 \* Not available in the US.

Designation	Tx	Rx	Country
M	157.850	157.850	UK
M2	161.425	161.425	UK
31	157.550	161.150	Holland / Belgium
96	162.425	162.425	Belgium
L1/1L	155.500	155.500	Scandinavia
L2/2L	155.525	155.525	Scandinavia
L3/3L	155.650	155.650	Scandinavia (not Denmark)
F1/1F	155.625	155.625	Scandinavia
F2/2F	155.775	155.775	Scandinavia
F3/3F	155.825	155.825	Scandinavia

**Note**

*Ch 0 will only be made available in the UK to Coastguard users with written authorization.*

Ch 70 is restricted for DSC (*Digital Selective Calling*) use only and is therefore not available on the HT50 or Axis 50 VHF radio. Axis 50 GMDSS models are fitted with simplex channels only.

The supplementary table (see left) lists further channels, which may be fitted to your radio. These are only licensed for use in the countries indicated. No attempt should be made to use them in any other country.



### 3.5 Battery life guidelines

New batteries should be fully (trickle) charged and fully discharged several times to achieve full capacity.

To a large extent, the battery life will depend on the usage, or Duty Cycle, of the radio (Tables 2 and 3), i.e. the battery will be drained much quicker if the radio is transmitting continually than if it is just receiving. Additionally, if the radio is set to High power (5 Watts\*), the power drain will be considerably greater than if transmitting on Low power (1 Watt\*).

*\*Standard power settings*

*Table 2 - Battery life values predicted from calculation:*

BATTERY PACK	Typical life of fully charged pack at 25°C		
	Duty Cycle Ai	Duty Cycle Aii	Duty Cycle B
850mAh NiCad	9 hrs	12 hrs	5 hrs
1200mAh NimH	12 hrs	20 hrs	7 hrs

**Ai** Based on - 5% Transmit at 5 Watt setting of r.f. output power (1.4 Amp)  
 5% Receive at 200 mWatts Audio (0.15 Amp)  
 90% Receiver squelched (0.02 Amp)

**Aii** Based on - 5% Transmit at 1 Watt setting of r.f. output power (0.8 Amp)  
 5% Receive at 200 mWatts Audio (0.15 Amp)  
 90% Receiver squelched (0.02 Amp)

**B** Based on - 10% Transmit at 5 Watts setting of r.f. output power (1.4 Amp)  
 10% Receiver at 250 mWatts Audio (0.15 Amp)  
 80% Receiver squelched (0.02 Amp)

*Table 3 - Battery charge held while stored*

The following data is approximate:

BATTERY PACK		Duration	
		At 25°C	At 45°C
850mAh NiCad	Up to 50% charge	4-6 months	4 weeks
1200mAh NimH	Up to 50% charge	4 months	4 weeks

### 3.6 Troubleshooting

Symptom	Possible cause	Remedy
Unit will not switch on	<ul style="list-style-type: none"> <li>• Battery not charged</li> <li>• Battery not attached correctly to radio</li> </ul>	<ul style="list-style-type: none"> <li>• Re-charge battery</li> <li>• Ensure battery is fully engaged (<i>see section 2.5</i>)</li> </ul>
Scan or Memory Scan is locking on a channel without a signal	<ul style="list-style-type: none"> <li>• Noise on the channel is holding the scan</li> </ul>	<ul style="list-style-type: none"> <li>• Increase squelch level</li> <li>• Inhibit channel from scan</li> </ul>
Dual Watch not being entered	<ul style="list-style-type: none"> <li>• Priority channel selected (normally channel 16)</li> </ul>	<ul style="list-style-type: none"> <li>• Select a working channel</li> </ul>
Cannot change channel	<ul style="list-style-type: none"> <li>• Dual Watch (D/W) engaged</li> </ul>	<ul style="list-style-type: none"> <li>• Exit Dual Watch</li> </ul>
Certain channel numbers are not obtainable	<ul style="list-style-type: none"> <li>• Some channels are restricted and programmed depending on country of purchase</li> </ul>	<ul style="list-style-type: none"> <li>• Consult your national authority for permitted channels in your region</li> </ul>
Will not transmit	<ul style="list-style-type: none"> <li>• Scanning or D/W function active</li> </ul>	<ul style="list-style-type: none"> <li>• Exit D/W or scan</li> </ul>
Will not transmit on 5W but OK on 1W	<ul style="list-style-type: none"> <li>• Low voltage when full transmitting current is drawn</li> <li>• Some channels are restricted to low power transmission only</li> </ul>	<ul style="list-style-type: none"> <li>• Battery charge low – recharge the battery</li> <li>• Consult your national authority</li> </ul>
Transmissions are persistently weak	<ul style="list-style-type: none"> <li>• Damaged antenna</li> </ul>	<ul style="list-style-type: none"> <li>• Replace antenna</li> </ul>

These simple checks should be carried out before seeking technical assistance and may save time and expense.

Before contacting your servicing agent please obtain the radio's serial number and the software iteration – this is shown in the large digits on the display for 2 seconds after the radio is turned on.

### 3.7 Spares & accessories

The following spares and accessories are available from authorized Simrad Service Agents. Please quote the relevant part number when ordering.

#### ANT3

Spare Antenna



#### HT50 Batteries –

##### NH12

1200 mAh NimH Battery Pack




#### Axis 50 GMDSS Batteries –

##### NC08

850 mAh NiCad Battery Pack

##### LTB3

Lithium Battery Pack  
(Non-rechargeable)

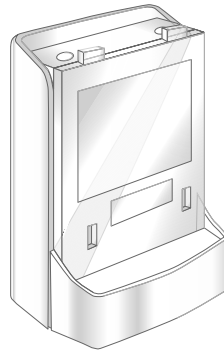

#### TC50

Trickle Charger

#### RC50

Rapid Charger



#### MAT50:U (UK)

MAT50:E (Europe)

MAT50:A (USA)


Mains Adaptors for TC50

#### MAR50:U (UK)

MAR50:E (Europe)

MAR50:A (USA)

Mains Adaptors for RC50

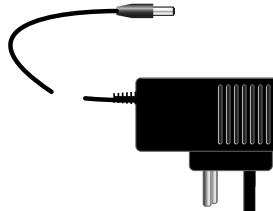

### 3.8 Technical specification

- Channel capability . . .54 international channels 1–28, 60–69, 71–88
- . . .Up to 10 private channels\*
- . . .UK : includes M (previously 37) and M2
- . . .USA : includes 0, 29, 89, 75, 76, Wx1–10 receive only
- . . .Scandinavia : leisure or fishing channels as appropriate
- . . .Canada : Canadian and USA channels


*GMDSS sets have simplex channels only: 06, 08–17, 67–69, 71–74, 77*

- Frequency range . . . . .155–163 MHz
- Operating temperature range . . . . .-20°C to +60°C
- Output power . . . . .HT50/HT51 – 1 & 5 Watts
- . . .Axis 50 GMDSS – 1 & 2.5 Watts
- Harmonic and spurious emissions . . . . .<.25µW Tx, <1nW Rx
- Sensitivity . . . . .0.5µV for 20 dB SINAD
- Selectivity . . . . .70 dB (±25 kHz)
- Intermodulation . . . . .70 dB
- Channel spacing . . . . .25 kHz
- Blocking . . . . .90 dB
- Spurious response . . . . .70 dB
- Audio output power . . . . .Max 0.4 Watts
- Current consumption . . . . .Squelched <25mA
- Receive . . . . .typically 125mA
- Transmit . . . . .5 Watts . . . 1.4A
- . . .1 Watt . . . 0.8A
- Weight . . . . .400 g including battery pack

*\* Contact your local Simrad Agent for further details of channel programming, etc.*

#### Environmental

- Waterproof . . . . .To a depth of 1 m (3ft) fully submersed, including a
- . . .45°C thermal shock; complies with IP67 standard
- . . .Will withstand petrol, diesel and other fuel oils
- Drop resistance . . . . .Will withstand a drop from 1 m on to a hard surface

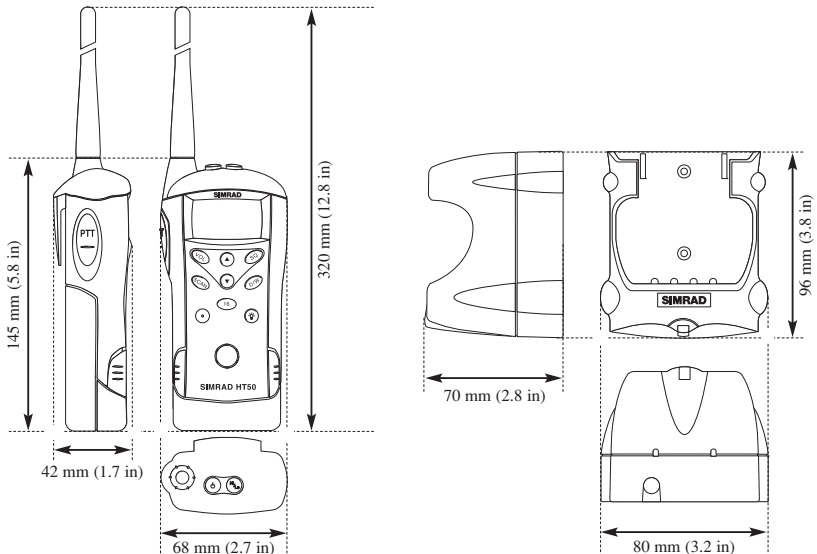

### 3.9 Declaration of Conformity

	<b>English</b>	Hereby, <b>Simrad Limited (Margate)</b> declares that this <b>HT50/HT51</b> is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
	<b>Finnish</b>	<b>Simrad Limited (Margate)</b> vakuuttaa täten että <b>HT50/HT51</b> tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
	<b>Dutch</b>	Hierbij verklaart <b>Simrad Limited (Margate)</b> dat het toestel <b>HT50/HT51</b> in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
	<b>French</b>	Par la présente, <b>Simrad Limited (Margate)</b> déclare que ce <b>HT50/HT51</b> est conforme aux exigences essentielles et aux autres dispositions de la directive 1999/5/CE qui lui sont applicables.
	<b>Swedish</b>	Härmed intygar <b>Simrad Limited (Margate)</b> att denna <b>HT50/HT51</b> står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.
	<b>Danish</b>	Undertegnede <b>Simrad Limited (Margate)</b> erklærer herved, at følgende udstyr <b>HT50/HT51</b> overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
	<b>German</b>	Hiermit erklärt <b>Simrad Limited (Margate)</b> , dass sich dieses <b>HT50/HT51</b> in Übereinstimmung mit den grundlegenden Anforderungen und den anderen relevanten Vorschriften der Richtlinie 1999/5/EG befindet. (BMW i)
	<b>Greek</b>	Με την παρούσα <b>Simrad Limited (Margate)</b> δηλώνει ότι <b>HT50/HT51</b> συμμορφώνεται προς τις ουσιαστικές απαιτήσεις και τις λοιπές σχετικές διατάξεις της οδηγίας 1999/5/EK.
	<b>Italian</b>	Con la presente <b>Simrad Limited (Margate)</b> dichiara che questo <b>HT50/HT51</b> è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
	<b>Spanish</b>	Por medio de la presente <b>Simrad Limited (Margate)</b> declara que el <b>HT50/HT51</b> cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
	<b>Portuguese</b>	<b>Simrad Limited (Margate)</b> declara que este <b>HT50/HT51</b> está conforme com os requisitos essenciais e outras provisões da Directiva 1999/5/CE.

Website – [www.simrad.com](http://www.simrad.com)



### 3.10 Service & Warranty

Your radio should seldom need servicing, although it will benefit from an application of silicone or Teflon grease to the battery contacts and antenna socket each season. For the HT51 only, please ensure the accessory connector is regularly greased.

This unit is guaranteed for 2 years from date of retail sale. If it is necessary to have the unit repaired, return it carriage prepaid to the agent in the country of purchase with a copy of the receipted invoice showing the date of purchase. Where possible, return all the components, unless you are certain that you have located the source of the fault. If the original packing is not available, ensure that it is well cushioned in packing; the rigors of freight handling can be very different from the loads encountered in the marine environment for which the unit is designed.

#### CAUTION

*The HT50, HT51, and Axis 50 are sealed waterproof units. To create and maintain their waterproof integrity, they were assembled in a controlled environment using special equipment. The radios are not user maintainable units, and UNDER NO CIRCUMSTANCES should the units be opened, except by authorized Simrad Service Agents. **Unauthorized opening of the unit will invalidate the warranty.***

For worldwide Warranty details, please refer to the Warranty Card supplied with this unit.



MAXIMIZING YOUR PERFORMANCE AT SEA

**SIMRAD**  
A KONGSBERG Company